


2025

# BLAZER EV PPV & SSV

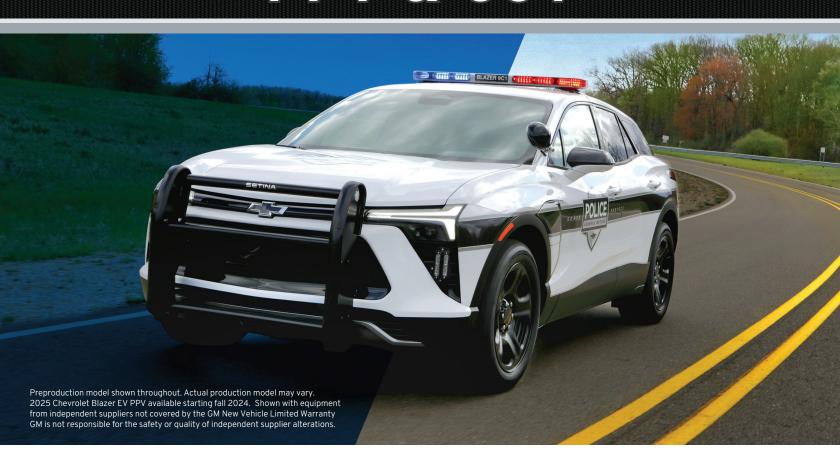





# **About This Publication**

This catalog is not updated during the model year and should not be used for ordering purposes. It is intended as a source of basic information. All illustrations and specifications in this literature are based on the latest product information available at the time of publication. General Motors reserves the right to make changes at any time without notice. For further details, consult your local dealer.

Care must be taken during customer installation of equipment and wiring to ensure that all holes drilled in the body are corrosion protected, properly sealed and that vehicle wiring harnesses, piping or other components have not been displaced or damaged. Aftermarket equipment installers must be mindful of applicable Federal Motor Vehicle Safety Standards. This information can be obtained directly from the National Highway Traffic Safety Administration. Adding non-dealer accessories or making modifications to the vehicle can affect vehicle performance, aerodynamics, and overall top speed. Please return all police vehicles to factory condition and settings upon decommissioning to prevent civilians from using these new 2025 calibrations, lighting and other features intended only for police and emergency customers. Wiring connection or splice changes are to be removed before the vehicle is returned to civilian use.

These vehicles are equipped with an airbag system. The airbag system in your police vehicle includes frontal driver and front outboard passenger airbags, front seat back side impact airbags and roof rail mounted head-curtain airbags. Customer installed equipment such as security barriers behind the front seats should not be mounted so that the barrier ends are within the side airbag deployment zones. The sensors and other components for the airbag system must not be relocated to accommodate the installation of customer furnished equipment; please refer to the service manual for sensor and other component locations. For information concerning instrument panel top pad mounted equipment and airbag system deployment zones, see the airbag information section in this catalog and the vehicle owners manual.

A note about vehicle alterations by independent suppliers: This catalog shows pictures of vehicles that have been altered or upfitted with equipment or components supplied to Chevrolet or its dealers by independent suppliers. GM is not responsible for the safety or quality of design features, materials or workmanship of any alterations by third parties.

# INDEX

# 2025 BLAZER EV POLICE PURSUIT (9C1) DETECTIVE (9C3) AND SPECIAL SERVICE (5W4)\*

- STANDARD FEATURES
- OPTIONAL FEATURES
- EMISSIONS & TIRES
- SPECIFICATIONS
- COLORS, EXTERIOR AND INTERIOR
- APPROACH AND DEPARTURE ANGLES
- SPEEDOMETER/CLUSTER DISPLAY
- VEHICLE PERSONALIZATION MENU
- STANDARD FEATURES HIGHLIGHTS
- OPTIONAL FEATUES HIGHLIGHTS
- WIRING DIAGRAMS
- AIRBAG DIMENSIONS
- NO DRILL / NO CUT ZONES
- AIRBAGS FAQ
- OnStar® OPTIONS
- MAINTENANCE AND LIMITED WARRANTY

# 2025 | **BLAZER EV** | POLICE & SPECIAL SERVICE



**BLAZER EV 9C1 INTERIOR** 

Shown with equipment from independent suppliers not covered by the GM New Vehicle Limited Warranty GM is not responsible for the safety or quality of independent supplier alterations.



BLAZER EV 9C3/5W4 INTERIOR

#### 2025 | BLAZER EV | POLICE & SPECIAL SERVICE

#### GM restricts the sale of police vehicles, and they are not to be sold to retail customers

The dual motor all-wheel drive Blazer EV Police Pursuit Package has been designed for police work up to, and including, high-Speed emergency vehicle operations. GM restricts the sale of police vehicles, and they are not to be sold to retail customers. Developed for the needs of Law Enforcement, the purpose-built electrical architecture is explicitly prepared for the demands of emergency equipment. A standard 400-volt to 12-volt DC power module is dedicated to emergency equipment demands and is engineered for 100-amps of continuous load. This architecture provides two 20-amp relays in front row with a 30-circuit harness and 50-amp battery feed. One 40-amp, and one 30-amp relay are located in left cargo corner with a 56-circuit harness that shares 25-redundant front signals. 100-amps of battery service and a ground are also standard. Wiring circuits are also included in the front doors to accommodate aftermarket exterior sideview mirror emergency lighting in addition to rear quarter glass wiring provisions. All circuits include a factory connector. A universal vehicle module is provided for CAN readability of selected signals. Model 1MF26 is required when ordering 9C1 or 9C3 Police Package. Content, options and specifications shown are for the police version only which differ from retail civilian models. Speed/Torque Limiter is not available for PPV.

#### The 9C1 and 9C3 Police Packages includes;

Certified speedometer, heavy duty suspension, under body skid plates, Firestone Firehawk Pursuit tires mounted on 20-inch steel wheels, 6-piston Brembo front calipers on 15.3-inch rotors for increased braking durability and performance during the rigors of a high-speed pursuit.

#### The 9C1 Marked Police Pursuit Package includes;

Front console delete, black rubberized vinyl floor covering and black cloth front and vinyl rear seating.

#### The 9C3 Detective Police Package includes;

Retail floor console with armrest, color-keyed carpeting in occupant area and black cloth front and rear seating with cup-holders.

#### The 5W4 Special Service Package\* includes;

22" machined-face aluminum wheels with carbon flash painted pockets, 275/40R22 all-season self-sealing blackwall tires, non-asbestos organic brake lining and FNC brake rotor Police Pursuit. Brake and Tire package is not designed for Pursuit.

	STANDARD INTERIOR FEATURES		
AIR CONDITIONING	Dual-zone automatic digital climate control. Rear passenger duct located on floor tunnel terminates at back of center console.		
AIR FILTER	Pollutant, odor and fine dust.		
ARMREST	(9C3 only) Front and rear center console armrest with cupholders.		
ASSIST HANDLES	Front passenger and rear outboard.		
AUDIO SYSTEM <sup>2</sup>	17.7" diagonal advanced color LCD display with Google built-in compatibility (select service plan required, terms and limitations apply), including navigation capability, connected apps, personalized profiles for each driver's settings, Natural Voice Recognition and Phone Integration.		
BLUETOOTH®3	Personal cell phone connectivity to vehicle infotainment system.		
CARGO TIE-DOWNS	2 cargo tie-downs in cargo area.		
COMPASS	Shown in display.		
CONSOLE, FLOOR	Deleted for 9C1 package (reference RPO code DLE), console with armrest for 9C3 and 5W4 package (reference RPO code D06).		
CRUISE CONTROL	Electronic with set and resume speed		
DEFOGGER	Rear-window electric		
DOOR LOCKS	Power locks for front and rear doors. Rear child security locks.		
DRIVER INFORMATION CENTER	11 inch diagonal display		
FLOOR COVERING	Black rubberized vinyl floor covering for 9C3 and 5W4 (reference RPO code BG9). Color-keyed carpeting in occupant area with black cloth front and rear seating for 9C3 and 5W4 (reference RPO code B30).		
REMOTE KEY	Two KEYS/FOBS and mechanical keys for ignition and doors. Four additional fobs are available. While unlimited number of learned KEYS/FOBS can operate Keyless start and Keyless open, for a particular vehicle, only the last 8 KEYS/FOBS learned will allow the key fob buttons to work. See Available Options page for ordering codes. See Optional Equipment page for programming procedure.		
KEYLESS OPEN	Includes extended range Remote Keyless Entry. If the Key Fob battery is depleted or due to to wireless interference, vehicle may be unlocked using the mechanical key.		
KEYLESS START	Includes extended range Remote Keyless Entry.		
GLASS	Acoustic, laminated front windshield. Side rear tempered, solar glazing.		
GLOVEBOX	Passenger side.		
LIGHTING	Front courtesy and dual reading lights. Rear roof, courtesy and dual reading lights.		
MICROPHONE, WIRING	Provision located above headliner over driver position for customer supplied microphone and department radio		
OnStar® SERVICES CAPABLE	See onstar.com for details and limitations. Services vary by model. Service plan required.		
OnStar® BASICS	OnStar Basics (OnStar Fleet Basics for Fleet) Drive confidently with core OnStar services including select remote commands, built-in voice assistance, real-time traffic and navigation, and Automatic Crash Response to help if you're in need. OnStar Basics includes select remote commands, Navigation, Voice Assistance, and Automatic Crash Response, for eligible vehicles with compatible software. For MY25 vehicles, OnStar Basics is standard for 8 years; OnStar plan, working electrical system, cell reception and GPS signal required. OnStar links to emergency services. Service coverage varies with conditions and location. Service availability, features and functionality vary by device and software version. See onstar.com for details and limitations		
POWER OUTLET	12-volt. Located in the center console compartment for 9C3 and 5W4. 9C1 Accessory Power Outlet; GM part numbers 22936013 and 13549534. USB GM part number 13561801.		

1. Always use seat belts and child restraints. Children are safer when properly secured in a rear seat in the appropriate child restraint. See the Owner's Manual for more information. 2. Functionality varies by model. Full functionality requires compatible Bluetooth and smartphone, and USB connectivity for some devices. Select service plan required, terms and limitations apply. Go to myChevrolet. com/learn About/bluetooth to find out which phones are compatible with the vehicle. 3. Go to myChevrolet.com/learn About/bluetooth to find out which phones are compatible with the vehicle.

5

V091724

<sup>\*</sup> Late Availability

	STANDARD INTERIOR FEATURES (CONTINUED)			
REAR VIEW MIRROR <sup>1</sup>	HD Rear Vision Camera. Includes Rear Camera Mirror Washer. Rear Camera Mirror allows user to choose between a traditional rear view mirror or a camera view unobstructed by the vehicle's pillars, trunk, roof, head restraints, rear-seat occupants and other interior aftermarket police equipment.			
REAR VISION CAMERA <sup>1</sup>	HD Rear Vision Camera shows you a high-resolution digital image of the area directly behind your vehicle when in Reverse to help you park and avoid vehicles and objects. You can also display an overlay of where your vehicle is heading.			
SEATS, FRONT	Police specific black cloth bucket seats, driver 8-way power, passenger 6-way power, driver and passenger 2-way power lumbar			
SEATS, REAR	60/40-split, fold-flat. 9C1 in vinyl, 9C3 and 5W4 in cloth with center armrest & cup holders.			
SIRUSXM WITH 360L	Includes a trial subscription to the Platinum Plan. Requires (UE1) OnStar. The SiriusXM trial package is not provided on vehicles that are ordered for Fleet Daily Rental ("FDR") use. Trial subscription subject to the SiriusXM Customer Agreement and privacy policy, visit www.siriusxm.com which includes full terms and how to cancel. All fees, content, features, and availability are subject to change. Some features require GM connected vehicle services.			
STEERING COLUMN	Tilt and telescopic.			
STEERING WHEEL CONTROLS	Audio, Driver Information Center and phone interface controls			
TEEN DRIVER <sup>1</sup>	A configurable feature that lets you activate customizable vehicle settings associated with a key FOB, to help encourage safe driving behavior. It can limit certain available vehicle features, and it prevents certain safety systems from being turned off. An in-vehicle report card gives you information on driving habits and helps you to continue to coach your new driver. Can be turned off in in your vehicle's Settings menu.			
TEMPERATURE DISPLAY	Outside temperature. Cabin humidity and windshield temperature sensor.			
THEFT DETERRENT SYSTEM	Unauthorized entry alert and immobilizer.			
TPMS	Tire Pressure Monitoring System with auto learn and Tire Fill Alert.			
UNIVERSAL VEHICLE MODULE	Provides CAN Readability of selected messages utilizing SAE J1939 formatting. This gateway module offers 10-switchable inputs and outputs, and includes a graphical user interface available to customize specific needs with more than 90 operating parameters available to read.			
USB CHARGING PORTS	For 9C3 only. 2 type-C located forward of cupholders, 2 Type-C located within the center console armrest bin and 2 charge only type-C located on back of center console.			
VENT	Rear Console, air. 9C3 only.			
VISORS	Driver and front passenger illuminated sliding vanity mirrors, covered.			
WINDOWS, POWER	Power driver and passenger with Express-Up/Down. Power rear with Express-Down.			
	STANDARD EXTERIOR FEATURES			
ANTENNA	Roof-mounted shark fin (black).			
CALIBRATION TAILLAMP	SLO Calibration for taillamp flasher, Red/Red. For detailed technical information on activation of this feature, refer to the vehicle technical guide under the Body Builder Manuals section on www.gmupfitter.com.			
CALIBRATION TAILLAMP	SJ9 Calibration for taillamp flasher Red/White. For detailed technical information on activation of this feature, refer to the vehicle technical guide under the Body Builder Manuals section on www.gmupfitter.com.			
CHARGE PORT	Manual			
DEFOGGER	Electric, rear window			
DRL	Day Tlme Running Lights. See option code 9G8 for permanent delete.			
DOOR HANDLES	Body color			
FRONT GRILLE	Gloss black			
FLASHER SYSTEM	Headlamp and taillamp, DRL compatible with individual control wires.			
FOG LAMPS	Not available			
GLASS	Acoustic, laminated front windshield. Solar Absorbing rear side window and rear quarter panel window. Tinted rear lifgate window.			
HEADLAMPS	LED with automatic on and off.			
LICENSE PLATE	Front mounting package (included on orders with ship-to states that require front license plate)			
LUGGAGE RACK	Not available. Roof rails deleted.			
MIRROR CAPS	High gloss black			
MIRRORS, OUTSIDE	Outside heated, power-adjustable, power-folding, driver-side auto-dimming with turn signal indicators.			
MOLDING	Door upper. Low gloss black.			
REAR CAMERA WASHER	Included with Rear Camera Mirror.			
REAR LIFTGATE	Manual			
RECOVERY HOOK <sup>2</sup>	One Threaded eye-bolt shipped loose for use on front or rear of vehicle.			
SPLASH GUARDS	Front and Rear molded splash guards. Not available at this time.			
TIRES	Firestone Firehawk Pursuit 265/50R20 all-season, V-rated, blackwall, (see standard features illustrations section)			
TIRE, SPARE	Standard Inflater Kit, Spare Tire And Jack Assembly Not Available.			
WHEELS	20" (50.8 cm) steel with bolted-on aluminum black center cap with black finish.			
WINDSHIELD	Solar absorbing shaded upper with acoustic laminated glass			
WIPERS, WINDSHIELD	Front intermittent with Rainsense.			
WIPER, REAR	Rear intermittent			

<sup>1.</sup> Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Visibility, weather, and road conditions may affect feature performance. Read the vehicle's owner's manual for more important feature limitations and information.

<sup>2.</sup> To avoid the risk of injury, never use Recovery Hooks to tow a vehicle. For more information, see the Recovery Hooks section of your Owner's Manual.

BATTERY, DRIVE BATTERY, SERVICE BLECTRONIC PRECISION SHIFT The electronic precision shift includes an electric parking brake. In the event of a loss of 12-volt battery power, the electric parking brake cannot be released, and the vehicle cannot be infliend by the vehicle will be used under the nor-rolling time to prevent discharge while loading/unioading the vehicle.  FLEET CONNECTED ACCESS OnStar and Controlled Connected services capable, includes (USS) 95 Wi-H-Hotspot capable, (UZK) SiriusXM with 860L, (NAH) Google Automotive Services capable, (UFS) 95 Wi-H-Hotspot capable, (UZK) SiriusXM with 860L, (NAH) Google Automotive Services capable, (UFS) 95 Wi-H-Hotspot capable, (UZK) SiriusXM with 860L, (NAH) Google Automotive Services capable, (UFS) 95 Wi-H-Hotspot capable, (UZK) SiriusXM with 860L, (NAH) Google Automotive Services capable, (UFS) 95 Wi-H-Hotspot capable, (UZK) SiriusXM with 860L, (NAH) Google Automotive Services capable, (UFS) 95 Wi-H-Hotspot capable, (UZK) SiriusXM with 860L, (NAH) Google Automotive Services capable, (UFS) 95 Wi-H-Hotspot capable, (UZK) SiriusXM with 860L, (NAH) Google Automotive Services capable, (UFS) 95 Wi-H-Hotspot capable, (UZK) SiriusXM with 860L, (NAH) Google Automotive Services capable, (UFS) 95 Wi-H-Hotspot capable, (UZK) SiriusXM with 600L, (NAH) Google Automotive Services capable, (UFS) 95 Wi-H-Hotspot capable, (UZK) SiriusXM with 600L, (NAH) Google Automotive Services capable, (UFS) 95 Wi-H-Hotspot capable, (UZK) SiriusXM with 600L, (NAH) Google Automotive Services capable, (UZK) 95 Wi-H-Hotspot capable, (UZK) SiriusXM with 600L capable Automotive Services capable, (UZK) 95 Wi-H-Hotspot capable, (UZK) SiriusXM with 600L capable Automotive Services capable, (UZK) 95 Wi-H-Hotspot Capable Automotive Services and Cutter Services and Cutter Services and Cutter Services Se		STANDARD ELECTRICAL FEATURES			
BATTERY, SERVICE  LECTRONIC PRECISION SHIFT  The electric parking brake cannot be released, and the which cannot be shifted to N (Neutral). Use skers or the electric parking brake cannot be released, and the which cannot be shifted to N (Neutral). Use skers or the electric parking brake cannot be released, and the which cannot be shifted to N (Neutral). Use skers or the electric parking brake cannot be released, and the which cannot be shifted to N (Neutral). Use skers or the electric parking brake cannot be shifted to N (Neutral). Use skers or Dogging the whiche will could be cannot be shifted to N (Neutral). Use skers or dogging the whiche warranty.  FLEET CONNECTED ACCESS  FLEET CONNECTED ACCESS  CASTA (CASTA) Google Automotive Services capable, (IDPA) serratiphone app renote start. Service were with additional to the state of the shift of the state of the shift of the late of the shift	BATTERY DRIVE				
ELECTRONIC PRECISION SHIFT The electron precision shift includes an electric parking brake annot be released, and the whelice cannot be efficied for N (Neutrin): is solvened to deliber the electric parking prize cannot be released, and the whelice cannot be efficied for N (Neutrin): is solvened to deliber the electric parking prize the electric parking prize cannot be released, and the whelice cannot be efficied for Neutrin):  FLEET CONNECTED ACCESS  OnStar and Chevrolit connected services capable includes (1955) 58 Wi-H Hotspot capable, (1976) Singuistic prize of the pr	•				
with 560L (NAM) Google Automotive Services capable (MPI) smortiphone apportenate start. Service varies with conditions and location. Reautore plan and paid ATAT data plan Service varies with conditions and location. Reautore plan and paid ATAT data plan Services considerate with conditions and and location. Reautore plan and paid ATAT data plan Services when the consideration of the plant of		The electronic precision shift includes an electric parking brake. In the event of a loss of 12-volt battery power, the electric parking brake cannot be released, and the vehicle cannot be shifted to N (Neutral). Tire skates or dollies must be used under the non-rolling tires to prevent damage while loading/unloading the vehicle.			
maximize immunity fo external emissions (effectomagnetic (EMI) or Radio Frequency (RFI) Interference). Most emergency which communications equipment operating a frequencies in the VHF Band (30-300 MHz) and up to frequencies in the VHF Band (300 MHz-3GHz) will function as intended without enhanced noise suppression.  REMOTE START  Key Foh activated. Included and only available with (UE) OnStar.  SURVEILLANCE MODE  Calibration to shut-down on-federally mandated exterior and interior sighting. Exterior lighting will shut off only if in auto mode and not equipped with optional LIGH ING DELLE (969). Cluster and Physiol Indicator only if in auto mode and not equipped with optional LIGH ING DELLE (969). Cluster and Physiol Indicator only if in auto mode and not equipped with optional LIGH ING DELLE (969). Cluster and Physiol Indicator only if in auto mode and not equipped with optional LIGH ING DELLE (969). Cluster and Physiol Indicator only if in auto mode and not equipped with optional LIGH ING DELLE (969). Cluster and Physiol Indicator only if in auto mode and not equipped with optional LIGH ING DELLE (969). Cluster and Physiol Indicator only if in auto mode and not equipped with optional LIGH ING DELLE (969). Cluster and Physiol Indicator only if in auto mode and not equipped with optional LIGH ING DELLE (969). Cluster and Physiol Indicator only in auto mode and not equipped and physiological phy	FLEET CONNECTED ACCESS	with 360L, (NAM) Google Automotive Services capable, (1MP) smartphone app remote start. Service varies with conditions and location. Requires active service plan and paid AT&T data plan. See OnStar. com/BusinessSolutions for details and limitations. Availability subject to change. Vehicle must be on or in the			
REMOTE START  Wey Fob activated included and only available with (UE) OnStar.  SURVEILLANCE MODE  Authority of a value of the start of	RADIO SUPPRESSION				
Surveillance Mobe  Calibration to shut-down non-federally mendated exterior and interior lighting. Exterior lighting will shut off only if in auto mode and not equipped with optional LIGHTING DELETE (PRIVI) indicator dimended to the minimum setting. Brake, reverse and turn signal lighting will override calibration and function if operated. For detailed technical information on activation of this feature, refer to the vehicle technical guide under the Body Builder Manuals section on www.gmupfitter.com.  See WiRING Section for Circuit Diagrams and connector information.  Phono-FREE START  REGEN ON DEMAND**  Helps convert the vehicle's kinetic energy into energy stored in the battery for later use to help get the most range.  Helps convert the vehicle's liketic energy into energy stored in the battery for later use to help get the most range.  Helps convert the vehicle's fixetic energy into energy stored in the battery for later use to help get the most range.  Helps convert the vehicle's fixetic energy into energy stored in the battery for later use to help get the most range.  Helps convert the vehicle's fixetic energy into energy stored in the battery for later use to help get the most range.  Helps convert the vehicle's fixetic energy into energy stored in the battery for later use to help get the most range.  Helps convert the vehicle's fixetic energy into energy stored in the battery for later use to help get the most range.  Helps convert the vehicle's fixetic energy into energy stored in the battery for later use to help get the most range.  Helps convert the vehicle's fixetic energy into energy stored in the battery for later use to help get the most range.  Helps convert the vehicle's fixetic energy into energy stored in the battery for later use to help get the most range.  Helps convert the vehicle's fixetic energy into energy stored in the battery stored in the convertion of the property of the vehicle is shifted to energy into energy stored in the foreure and seal energy energy energy for the propert	REMOTE PANIC ALARM	Keyless remote panic button activates horn and flashing exterior lights. Can be disabled with optional 5J1 calibration.			
only if in auto mode and not equipped with optional LIGHTING DELETE (9GS). Cluster and PRND) indicator dimmed to the minimum setting. Brake, reverse and turn signal lighting will override calibration and function if operated. For detailed technical information on activation of this feature, refer to the vehicle technical guide under the Body Builder Manuals section on www.gmughtfercom.  PROVISIONS  ONE PEDAL DRIVING! Helps convert the vehicle's kinetic energy into energy stored in the battery for later use to help get the most range. Plant the brake pedal after closing the door to start vehicle. The key fob authorizes the hands-free start system.  Plant the vehicle is shifted to Park, the vehicle will turn off when driver exit is detected. Retained Accessory Power (RAP) will remain active until the driver door is opened.  ULTIF! Separates the vehicle's software from the hardware to enable the frequent and seamless delivery of software-defined features, apps and services to customers over the air. Ultila illows customers to cortinue to upgrade and personalize their vehicle is improvements and new features become available over time.  USB POWER, FRONT  USB 12-voit. Not available for 9Cf. Located in the center console compartment for 9C3 and 5W4.2 type C USB ports located forward of the cup holders, USB 2 type C USB located on back of center console, charge only and USB port type C located within center console armest bin. Not available for 9Cf.  STANDARD MECHANICAL FEATURES  Front Brembo performance disc brakes with non-FNC rotors.  COOLING  SUSPENSION  PROVER, non-veriable ratio, electric.  STANDARD SAFETY FEATURES  AIRBAGS¹  Frontal, knee and seat-mounted side-impact for driver and front, passenger, and roof-rail mounted head-curtain for outboard seeting positions. Includes Passenger Sensing System for front passenger.  BUCKLE TO DRIVE  BUCKLE TO DRIVE  Prevents vehicle from being shifted out of Park until driver seats bet its fastenes the south after 20 seconds and encourages seat bet use, can be turned on in	REMOTE START	Key Fob activated. Included and only available with (UE1) OnStar.			
PROVISIONS  ONE PEDAL DRIVING¹ Helps convert the vehicle's kinetic energy into energy stored in the battery for later use to help get the most range.  HANDS-FREE START  REGEN ON DEMAND™  REGEN ON DEMAND™  RETAINED ACCESSORY POWER  If the vehicle's kinetic energy into energy stored in the battery for later use to help get the most range.  Helps convert the vehicle's kinetic energy into energy stored in the battery for later use to help get the most range.  RETAINED ACCESSORY POWER  If the vehicle is shifted to Park, the vehicle's will turn off when driver exit is detected. Retained Accessory Power (RAP) will remain active until the driver door is opened.  ULTIFI²  Separates the vehicle's software from the hardware to enable the frequent and seemless delivery of software-defined features, apps and services to customers over the air Ulfil allows customers to continue to usgrade and personalize their vehicle as improvements and new features become available over time.  USB POWER, FRONT  USB 12-VOIS Not available for 9C1. Located in the center console compartment for 9C3 and 5W4.2 type C USB ports poet Colected within center console armrest bin. Not available for 9C1.  STANDARD MECHANICAL FEATURES  BRAKES  Front Brembo performance disc brakes with non-FNC rotors.  COOLING  BRAKES Steel front and rear  STEERING  SUSPENSION  Performance  Performance  Performance  Performance  Performance  BULL TO LOTOR OLD Electronic  STANDARD SAFETY FEATURES  AIRBAGS⁴  Frontal, knee and seat-mounted side-impact for driver and front passenger, and roof-rail mounted head-curtain for outboard seating positions. Includes Passenger Sensing System for front passenger.  Prevents vehicle from being shifted out of Park until driver seat belt is fastered, times out after 20 seconds and encourages seat belt use, can be turned on in the Infotantiment menu.  LATCH SYSTEM⁴  (Lower Anchors and Tethers for Children), for child child restraint seats.  Safety Alext Seat use left right- or both side driver seat belt is festered, times out after 20 seco	SURVEILLANCE MODE	only if in auto mode and not equipped with optional LIGHTING DELETE (9G8). Cluster and PRND indicator dimmed to the minumum setting. Brake, reverse and turn signal lighting will override calibration and function if operated. For detailed technical information on activation of this feature, refer to the vehicle technical guide			
HANDS-FREE START REGEN ON DEMAND** REGIN ON DEMAND** REGIN ON DEMAND** RETAINED ACCESSORY POWER If the vehicle is shifted to Park, the vehicle will turn off when driver exit is detected. Retained Accessory Power (RAP) will remain active until the driver door is opened.  ULTIFI2 Separates the vehicle's software from the hardware to enable the frequent and seamles delivery of software-defined features, apps and services to customers over the air Utifi allows customers to continue to upgrade and personalize their vehicle as improvements and new features become available over time.  USB POWER, FRONT USB POWER, FRONT USB POWER OF THE WASH TO AND THE WASH		See WIRING Section for Circuit Diagrams and connector information.			
REGEN ON DEMAND™ Helps convert the vehicle's kinetic energy into energy stored in the battery for later use to help get the most range.  If the vehicle is shifted to Park, the vehicle will turn off when driver exit is detected. Retained Accessory Power (RAP) will remain active until the driver door is opened.  ULTIFI² Separates the vehicle's software from the hardware to enable the frequent and seamless delivery of software-defined features, apps and services to oustomers over the air. Ultif allows customers to continue to upgrade and personalize their vehicle as improvements and new features become available over time.  USB POWER, FRONT  USB 12-volt Not available for 9C1. Located in the center console compartment for 9C3 and 5W4. 2 type C USB ports located forward of the cup holders, USB 2 type C USB located on back of center console, charge only and USB port type C located within center console armrest bin. Not available for 9C1.  STANDARD MECHANICAL FEATURES  BRAKES  Front Brembo performance disc brakes with non-FNC rotors.  COOLING  Heavy-duty  SkiD PLATES  Steel front and rear  Power, non-variable ratio, electric.  SUSPENSION  Performance  TRANSMISSION  Ultium Performance Dual Motor All Wheel Drive System.  Electronic  STANDARD SAFETY FEATURES  AIRBAGS <sup>4</sup> Frontal, knee and seat-mounted side-impact for driver and front passenger, and roof-rail mounted head-curtain for outboard seating positions. Includes Passenger Sensing System for front passenger.  BUCKLE TO DRIVE  Prevents vehicle from being shifted out of Park until driver seat belt is fastened; times out after 20 seconds and encourages seat belt use, can be turned on and off in Settings or Ten Priver menu This feature is defaulted off for 9C1, 9C3 and 5W4 but can be turned on in the Infotainment menu.  LATCH SYSTEM  (Lower Anchors and Tethers for C'Hildren), for child child restraint seats.  REAR PARK ASSIST <sup>3</sup> Prevents vehicle software and rear passengers.  STABILITRAK  Front passenger and rear passengers.  SEAT BELT INDICATORS <sup>4</sup> Priver, front pas	ONE PEDAL DRIVING <sup>1</sup>	Helps convert the vehicle's kinetic energy into energy stored in the battery for later use to help get the most range.			
RETAINED ACCESSORY POWER  If the vehicle is shifted to Park, the vehicle will turn off when driver exit is detected. Retained Accessory Power (RAP) will remain active until the driver door is opened.  ULTIFI? Separates the vehicle's software from the hardware to enable the frequent and seamless delivery of software-defined features, apps and services to customers over the air. Ultifi allows customers to continue to upgrade and personalize their vehicle as improvements and new features become available for requent and seamless delivery of software-defined features, apps and services to customers over the air. Ultifi allows customers to continue to upgrade and personalize their vehicle as improvements and new features become available for expect the relicited and personalize their vehicle as improvements and new features become available to upgrade and personalize their vehicle and part type C USB located on back of center console, charge only and USB port type C located within center console armrest bin. Not available for 9C1.  STANDARD MECHANICAL FEATURES  BRAKES Front Brembo performance disc brakes with non-FNC rotors.  Heavy-duty SKIDPLATES Steel front and rear STEERING Power, non-variable ratio, electric.  SUSPENSION Performance Performance Dual Motor All Wheel Drive System.  TRACTION CONTROL Electronic  STANDARD SAFETY FEATURES  AIRBAGS4 Frontal, knee and seat-mounted side-impact for driver and front passenger, and roof-rail mounted head-curtain for outboard seating positions. Includes Passenger Sensing System for front passenger.  BUCKLE TO DRIVE Prevents vehicle from being shifted out of Park until driver seat belt is fastened; times out after 20 seconds and encourages seat belt use, can be turned on and off in Settings or Teen Driver menu This feature is defaulted off for SC1. SC3 and SW4 but can be turned on in the infotainment menu.  LATCH SYSTEM4 Clower Anchors and Tethers for Children), for child child restraint seats.  REAR SEAT REMINDER4 Rear Seat Reminder4 cose not detect people, animals or object	HANDS-FREE START	Push the brake pedal after closing the door to start vehicle. The key fob authorizes the hands-free start system.			
ULTIFI <sup>2</sup> Separates the vehicle's software from the hardware to enable the frequent and seamless delivery of software-defined features, apps and services to customers over the air. Ulfif allows customers to continue to upgrade and personalize their vehicle as improvements and new features become available over time.  USB POWER, FRONT  USB LE-Volt Not available for 9C1. Located in the center console compartment for 9C3 and 5W4. 2 type C USB ports located forward of the cup holders. USB 2 type C USB located on back of center console, charge only and USB port type C located within center console armrest bin. Not available for 9C1.  STANDARD MECHANICAL FEATURES  BRAKES  Front Brembo performance disc brakes with non-FNC rotors.  COOLING  Heavy-duty  SKID PLATES  Steel front and rear  STEERING  Power, non-variable ratio, electric.  SUSPENSION  Performance  TRANSMISSION  Ultium Performance Dual Motor All Wheel Drive System.  Electronic  STANDARD SAFETY FEATURES  AIRBAGS <sup>4</sup> Frontal, knee and seat-mounted side-impact for driver and front passenger, and roof-rail mounted head-curtal for outboard seating positions. Includes Passenger Sensing System for front passenger.  BUCKLE TO DRIVE  Prevents vehicle from being shifted out of Park until driver seat belt is fastened; times out after 20 seconds and encourages seat belt use, can be turned on and off in Settings or Teen Driver menu This feature is defaulted off for 9C1, 9C3 and 5W4 but can be turned on in the Infolaimment menu.  LATCH SYSTEM <sup>4</sup> (Lower Anchors and Tethers for CHildren), for child child restraint seats.  REAR SEAT REMINDER <sup>4</sup> Seaf Bear Seat Reminder does not detect people, animals or objects in the back seat. It only registers when a rear door has been opened. Can be turned of in in your vehicles Settings menu.  SAFETY ALERT SEAT <sup>3</sup> Safety Alert Seat uses left, right- or both-side driver seat vibration pulses to help you detect and identify the direction of potential crashes. You can also switch to beeping crash avoidance alerts.  SEAT BELT INDICATORS <sup>4</sup>	REGEN ON DEMAND™	Helps convert the vehicle's kinetic energy into energy stored in the battery for later use to help get the most range.			
features, apps and services to customers over the air Ultifi allows customers to continue to upgrade and personalize their vehicle as improvements and new features become available over time.  USB POWER, FRONT  USB 12-volt Not available for 9C1. Located in the center console compartment for 9C3 and 5W4. 2 type C USE ports located on back of center console, charge only and USB port type C located within center console armrest bin. Not available for 9C1.  STANDARD MECHANICAL FEATURES  BRAKES  Front Brembo performance disc brakes with non-FNC rotors.  COOLING  Heavy-duty  SKID PLATES  Steel front and rear  STEERING  Power, non-variable ratio, electric.  SUSPENSION  Performance  TRANSMISSION  Ultium Performance Dual Motor All Wheel Drive System.  Electronic  STANDARD SAFETY FEATURES  AIRBAGS4  Frontal, knee and seat-mounted side-impact for driver and front passenger, and roof-rail mounted head-curtai for outboard seating positions. Includes Passenger Sensing System for front passenger.  BUCKLE TO DRIVE  Prevents vehicle from being shifted out of Park until driver seat belt is fastened; times out after 20 seconds and encourages seat belt use, can be turned on and off in Settings or Teen Driver menu This feature is defaulted off for 9C1, 9C3 and SW4 but can be turned on in the Infotainment menu.  LATCH SYSTEM4  (Lower Anchors and Tethers for CHildren), for child child restraint seats.  REAR SEAT REMINDER4  Safety Alert Seat uses left-, right- or both-side driver seat vibration pulses to help you detect and identify the direction of potential crashes. You can also switch to beeping crash avoidance alerts.  SEAT BELTS4  Seat BELTS4  Seat Belt INDICATORS4  Driver, front passenger and rear passengers.  STABILITRAK  Stability Control System with Proactive Roll Avoidance and traction control, includes electronic trailer sway control and hill start assist.  REAR PARK ASSIST3  Rear Park Assist7	RETAINED ACCESSORY POWER				
ports located forward of the cup holders, USB 2 type C USB located on back of center console, charge only and USB port type C located within center console armrest bin. Not available for 9C1.  STANDARD MECHANICAL FEATURES  BRAKES Front Brembo performance disc brakes with non-FNC rotors.  COOLING SKID PLATES Steel front and rear STEERING Power, non-variable ratio, electric.  Performance ITRANSMISSION Ultium Performance Dual Motor All Wheel Drive System.  Electronic  STANDARD SAFETY FEATURES  AIRBAGS <sup>4</sup> Frontal, knee and seat-mounted side-impact for driver and front passenger, and roof-rail mounted head-curtai for outboard seating positions. Includes Passenger Sensing System for front passenger.  BUCKLE TO DRIVE Prevents vehicle from being shifted out of Park until driver seat belt is fastened; times out after 20 seconds and encourages seat belt use, can be turned on and off in Settings or Teen Driver menu This feature is defaulted off for 9C1, 9C3 and SW4 but can be turned on in the Infotainment menu.  LATCH SYSTEM (Lower Anchors and Tethers for CHildren), for child child restraint seats.  REAR SEAT REMINDER <sup>4</sup> Rear Seat Reminder does not detect people, animals or objects in the back seat. It only registers when a rear door has been opened. Can be turned off in in your vehicle's Settings menu.  SAFETY ALERT SEAT3 Safety Alert Seat uses left-, right- or both-side driver seat vibration pulses to help you detect and identify the direction of potential crashes. You can also switch to beeping crash avoidance alerts.  SEAT BELTS <sup>4</sup> 3-point, all positions, includes front and rear seat belt pretensioners  SEAT BELTINDICATORS <sup>4</sup> Driver, front passenger and rear passengers.  STABILITRAK REAR PARK ASSIST <sup>3</sup> R	ULTIFI <sup>2</sup>	features, apps and services to customers over the air. Ultifi allows customers to continue to upgrade and personalize their			
BRAKES Front Brembo performance disc brakes with non-FNC rotors.  COOLING Heavy-duty  SKID PLATES Steel front and rear STEERING Power, non-variable ratio, electric.  SUSPENSION Performance TRANSMISSION Ultium Performance Dual Motor All Wheel Drive System.  Electronic  STANDARD SAFETY FEATURES  AIRBAGS <sup>4</sup> Frontal, knee and seat-mounted side-impact for driver and front passenger, and roof-rail mounted head-curtai for outboard seating positions. Includes Passenger Sensing System for front passenger.  BUCKLE TO DRIVE Prevents vehicle from being shifted out of Park until driver seat belt is fastened; times out after 20 seconds and encourages seat belt use, can be turned on and off in Settings or Teen Driver menu This feature is defaulted off for 9C1, 9C3 and 5W4 but can be turned on in the Informent menu.  LATCH SYSTEM <sup>4</sup> (Lower Anchors and Tethers for CHildren), for child child restraint seats.  REAR SEAT REMINDER <sup>4</sup> Rear Seat Reminder does not detect people, animals or objects in the back seat. It only registers when a rear door has been opened. Can be turned off in in your vehicle's Settings menu.  SAFETY ALERT SEAT <sup>3</sup> Safety Alert Seat uses left, right- or both-side driver seat vibration pulses to help you detect and identify the direction of potential crashes. You can also switch to beeping crash avoidance alerts.  SEAT BELTS <sup>4</sup> SEAT BELTS <sup>4</sup> SEAT BELTINDICATORS <sup>4</sup> Driver, front passenger and rear passengers.  STABILITRAK Stability Control System with Proactive Roll Avoidance and traction control, includes electronic trailer sway control and hill start assist.  REAR PARK ASSIST <sup>3</sup> Rear Park Assist provides alerts of nearby detected vehicle and objects behind your vehicle to help you park	USB POWER, FRONT				
COOLING SKID PLATES Steel front and rear STEERING Power, non-variable ratio, electric.  SUSPENSION Performance Ultium Performance Dual Motor All Wheel Drive System.  TRANSMISSION Ultium Performance Dual Motor All Wheel Drive System.  TRACTION CONTROL Electronic  STANDARD SAFETY FEATURES  AIRBAGS <sup>4</sup> Frontal, knee and seat-mounted side-impact for driver and front passenger, and roof-rail mounted head-curtail for outboard seating positions. Includes Passenger Sensing System for front passenger.  BUCKLE TO DRIVE Prevents vehicle from being shifted out of Park until driver seat belt is fastened; times out after 20 seconds and encourages seat belt use, can be turned on and off in Settings or Teen Driver menu This feature is defaulted off for 9C1, 9C3 and 5W4 but can be turned on in the Infotainment menu.  LATCH SYSTEM <sup>4</sup> (Lower Anchors and Tethers for CHildren), for child child restraint seats.  REAR SEAT REMINDER <sup>4</sup> Rear Seat Reminder does not detect people, animals or objects in the back seat. It only registers when a rear door has been opened. Can be turned off in in your vehicle's Settings menu.  SAFETY ALERT SEAT <sup>3</sup> Safety Alert Seat uses left, right- or both-side driver seat vibration pulses to help you detect and identify the direction of potential crashes. You can also switch to beeping crash avoidance alerts.  SEAT BELT INDICATORS <sup>4</sup> Driver, front passenger and rear passengers.  STABILITRAK Stability Control System with Proactive Roll Avoidance and traction control, includes electronic trailer sway control and hill start assist.  REAR PARK ASSIST <sup>3</sup> Rear Park Assist provides alerts of nearby detected vehicle and objects behind your vehicle to help you park		STANDARD MECHANICAL FEATURES			
COOLING SKID PLATES Steel front and rear STEERING Power, non-variable ratio, electric.  SUSPENSION Performance Ultium Performance Dual Motor All Wheel Drive System.  TRANSMISSION Ultium Performance Dual Motor All Wheel Drive System.  TRACTION CONTROL Electronic  STANDARD SAFETY FEATURES  AIRBAGS <sup>4</sup> Frontal, knee and seat-mounted side-impact for driver and front passenger, and roof-rail mounted head-curtail for outboard seating positions. Includes Passenger Sensing System for front passenger.  BUCKLE TO DRIVE Prevents vehicle from being shifted out of Park until driver seat belt is fastened; times out after 20 seconds and encourages seat belt use, can be turned on and off in Settings or Teen Driver menu This feature is defaulted off for 9C1, 9C3 and 5W4 but can be turned on in the Infotainment menu.  LATCH SYSTEM <sup>4</sup> (Lower Anchors and Tethers for CHildren), for child child restraint seats.  REAR SEAT REMINDER <sup>4</sup> Rear Seat Reminder does not detect people, animals or objects in the back seat. It only registers when a rear door has been opened. Can be turned off in in your vehicle's Settings menu.  SAFETY ALERT SEAT <sup>3</sup> Safety Alert Seat uses left, right- or both-side driver seat vibration pulses to help you detect and identify the direction of potential crashes. You can also switch to beeping crash avoidance alerts.  SEAT BELT INDICATORS <sup>4</sup> Driver, front passenger and rear passengers.  STABILITRAK Stability Control System with Proactive Roll Avoidance and traction control, includes electronic trailer sway control and hill start assist.  REAR PARK ASSIST <sup>3</sup> Rear Park Assist provides alerts of nearby detected vehicle and objects behind your vehicle to help you park	BRAKES	Front Brembo performance disc brakes with non-FNC rotors.			
STEERING SUSPENSION Performance TRANSMISSION Ultium Performance Dual Motor All Wheel Drive System.  TRACTION CONTROL Electronic  STANDARD SAFETY FEATURES  AIRBAGS4 Frontal, knee and seat-mounted side-impact for driver and front passenger, and roof-rail mounted head-curtail for outboard seating positions. Includes Passenger Sensing System for front passenger.  BUCKLE TO DRIVE Prevents vehicle from being shifted out of Park until driver seat belt is fastened; times out after 20 seconds and encourages seat belt use, can be turned on and off in Settings or Teen Driver menu This feature is defaulted off for 9Cl, 9C3 and 5W4 but can be turned on in the Infotainment menu.  LATCH SYSTEM4 (Lower Anchors and Tethers for CHildren), for child child restraint seats.  REAR SEAT REMINDER4 Rear Seat Reminder does not detect people, animals or objects in the back seat. It only registers when a rear door has been opened. Can be turned off in in your vehicle's Settings menu.  SAFETY ALERT SEAT3 Safety Alert Seat uses left-, right- or both-side driver seat vibration pulses to help you detect and identify the direction of potential crashes. You can also switch to beeping crash avoidance alerts.  SEAT BELTS SEAT BELTS SEAT BELTINDICATORS4 Triver, front passenger and rear passengers.  STABILITRAK Stability Control System with Proactive Roll Avoidance and traction control, includes electronic trailer sway control and hill start assist.  REAR PARK ASSIST3 Rear Park Assist provides alerts of nearby detected vehicle and objects behind your vehicle to help you park	COOLING				
TRANSMISSION Ultium Performance Dual Motor All Wheel Drive System.  TRACTION CONTROL Electronic  STANDARD SAFETY FEATURES  AIRBAGS <sup>4</sup> Frontal, knee and seat-mounted side-impact for driver and front passenger, and roof-rail mounted head-curtain for outboard seating positions. Includes Passenger Sensing System for front passenger.  BUCKLE TO DRIVE Prevents vehicle from being shifted out of Park until driver seat belt is fastened; times out after 20 seconds and encourages seat belt use, can be turned on and off in Settings or Teen Driver menu This feature is defaulted off for 9C1, 9C3 and 5W4 but can be turned on in the Infotainment menu.  LATCH SYSTEM <sup>4</sup> (Lower Anchors and Tethers for CHildren), for child child restraint seats.  REAR SEAT REMINDER <sup>4</sup> Rear Seat Reminder does not detect people, animals or objects in the back seat. It only registers when a rear door has been opened. Can be turned off in in your vehicle's Settings menu.  SAFETY ALERT SEAT <sup>3</sup> Safety Alert Seat uses left-, right- or both-side driver seat vibration pulses to help you detect and identify the direction of potential crashes. You can also switch to beeping crash avoidance alerts.  SEAT BELTS A-point, all positions, includes front and rear seat belt pretensioners  SEAT BELT INDICATORS <sup>4</sup> Driver, front passenger and rear passengers.  STABILITRAK Stability Control System with Proactive Roll Avoidance and traction control, includes electronic trailer sway control and hill start assist.  REAR PARK ASSIST <sup>3</sup> Rear Park Assist provides alerts of nearby detected vehicle and objects behind your vehicle to help you park	SKID PLATES	Steel front and rear			
TRANSMISSION TRACTION CONTROL Electronic  STANDARD SAFETY FEATURES  AIRBAGS <sup>4</sup> Frontal, knee and seat-mounted side-impact for driver and front passenger, and roof-rail mounted head-curtain for outboard seating positions. Includes Passenger Sensing System for front passenger.  BUCKLE TO DRIVE Prevents vehicle from being shifted out of Park until driver seat belt is fastened; times out after 20 seconds and encourages seat belt use, can be turned on and off in Settings or Teen Driver menu This feature is defaulted off for 9C1, 9C3 and 5W4 but can be turned on in the Infotainment menu.  LATCH SYSTEM <sup>4</sup> (Lower Anchors and Tethers for CHildren), for child child restraint seats.  REAR SEAT REMINDER <sup>4</sup> Rear Seat Reminder does not detect people, animals or objects in the back seat. It only registers when a rear door has been opened. Can be turned off in in your vehicle's Settings menu.  Safety Alert Seat uses left-, right- or both-side driver seat vibration pulses to help you detect and identify the direction of potential crashes. You can also switch to beeping crash avoidance alerts.  SEAT BELTS <sup>4</sup> 3-point, all positions, includes front and rear seat belt pretensioners  SEAT BELT INDICATORS <sup>4</sup> Driver, front passenger and rear passengers.  STABILITRAK Stability Control System with Proactive Roll Avoidance and traction control, includes electronic trailer sway control and hill start assist.  REAR PARK ASSIST <sup>3</sup> Rear Park Assist provides alerts of nearby detected vehicle and objects behind your vehicle to help you park	STEERING	Power, non-variable ratio, electric.			
TRACTION CONTROL  Electronic  STANDARD SAFETY FEATURES  AIRBAGS <sup>4</sup> Frontal, knee and seat-mounted side-impact for driver and front passenger, and roof-rail mounted head-curtain for outboard seating positions. Includes Passenger Sensing System for front passenger.  BUCKLE TO DRIVE Prevents vehicle from being shifted out of Park until driver seat belt is fastened; times out after 20 seconds and encourages seat belt use, can be turned on and off in Settings or Teen Driver menu This feature is defaulted off for 9Cl, 9C3 and 5W4 but can be turned on in the Infotainment menu.  LATCH SYSTEM <sup>4</sup> (Lower Anchors and Tethers for CHildren), for child child restraint seats.  REAR SEAT REMINDER <sup>4</sup> REAR SEAT REMINDER <sup>4</sup> Safety Alert Seat uses left-, right- or both-side driver seat vibration pulses to help you detect and identify the direction of potential crashes. You can also switch to beeping crash avoidance alerts.  SEAT BELTS <sup>4</sup> Seat BELTS in Dicators <sup>5</sup> Driver, front passenger and rear passengers.  STABILITRAK Stability Control System with Proactive Roll Avoidance and traction control, includes electronic trailer sway control and hill start assist.  REAR PARK ASSIST <sup>3</sup> Rear Park Assist provides alerts of nearby detected vehicle and objects behind your vehicle to help you park	SUSPENSION	Performance			
STANDARD SAFETY FEATURES  AIRBAGS <sup>4</sup> Frontal, knee and seat-mounted side-impact for driver and front passenger, and roof-rail mounted head-curtail for outboard seating positions. Includes Passenger Sensing System for front passenger.  BUCKLE TO DRIVE Prevents vehicle from being shifted out of Park until driver seat belt is fastened; times out after 20 seconds and encourages seat belt use, can be turned on and off in Settings or Teen Driver menu This feature is defaulted off for 9C1, 9C3 and 5W4 but can be turned on in the Infotainment menu.  LATCH SYSTEM <sup>4</sup> (Lower Anchors and Tethers for CHildren), for child child restraint seats.  REAR SEAT REMINDER <sup>4</sup> Rear Seat Reminder does not detect people, animals or objects in the back seat. It only registers when a rear door has been opened. Can be turned off in in your vehicle's Settings menu.  SAFETY ALERT SEAT <sup>3</sup> Safety Alert Seat uses left-, right- or both-side driver seat vibration pulses to help you detect and identify the direction of potential crashes. You can also switch to beeping crash avoidance alerts.  SEAT BELTS <sup>4</sup> 3-point, all positions, includes front and rear seat belt pretensioners  SEAT BELT INDICATORS <sup>4</sup> Driver, front passenger and rear passengers.  STABILITRAK Stability Control System with Proactive Roll Avoidance and traction control, includes electronic trailer sway control and hill start assist.  REAR PARK ASSIST <sup>3</sup> Rear Park Assist provides alerts of nearby detected vehicle and objects behind your vehicle to help you park	TRANSMISSION	Ultium Performance Dual Motor All Wheel Drive System.			
Frontal, knee and seat-mounted side-impact for driver and front passenger, and roof-rail mounted head-curtain for outboard seating positions. Includes Passenger Sensing System for front passenger.  BUCKLE TO DRIVE  Prevents vehicle from being shifted out of Park until driver seat belt is fastened; times out after 20 seconds and encourages seat belt use, can be turned on and off in Settings or Teen Driver menu This feature is defaulted off for 9C1, 9C3 and 5W4 but can be turned on in the Infotainment menu.  LATCH SYSTEM  (Lower Anchors and Tethers for CHildren), for child child restraint seats.  REAR SEAT REMINDER  Rear Seat Reminder does not detect people, animals or objects in the back seat. It only registers when a rear door has been opened. Can be turned off in in your vehicle's Settings menu.  SAFETY ALERT SEAT  Safety Alert Seat uses left-, right- or both-side driver seat vibration pulses to help you detect and identify the direction of potential crashes. You can also switch to beeping crash avoidance alerts.  SEAT BELTS  SEAT BELTS  STABILITRAK  Stability Control System with Proactive Roll Avoidance and traction control, includes electronic trailer sway control and hill start assist.  REAR PARK ASSIST  Rear Park Assist provides alerts of nearby detected vehicle and objects behind your vehicle to help you park	TRACTION CONTROL	Electronic			
BUCKLE TO DRIVE Prevents vehicle from being shifted out of Park until driver seat belt is fastened; times out after 20 seconds and encourages seat belt use, can be turned on and off in Settings or Teen Driver menu This feature is defaulted off for 9C1, 9C3 and 5W4 but can be turned on in the Infotainment menu.  LATCH SYSTEM4 (Lower Anchors and Tethers for CHildren), for child child restraint seats.  REAR SEAT REMINDER4 REAR SEAT REMINDER4 Safety Alert Seat uses left-, right- or both-side driver seat vibration pulses to help you detect and identify the direction of potential crashes. You can also switch to beeping crash avoidance alerts.  SEAT BELT54 SEAT BELT54 STABILITRAK Stability Control System with Proactive Roll Avoidance and traction control, includes electronic trailer sway control and hill start assist.  REAR PARK ASSIST3 Rear Park Assist provides alerts of nearby detected vehicle and objects behind your vehicle to help you park		STANDARD SAFETY FEATURES			
BUCKLE TO DRIVE Prevents vehicle from being shifted out of Park until driver seat belt is fastened; times out after 20 seconds and encourages seat belt use, can be turned on and off in Settings or Teen Driver menu This feature is defaulted off for 9C1, 9C3 and 5W4 but can be turned on in the Infotainment menu.  LATCH SYSTEM4 (Lower Anchors and Tethers for CHildren), for child child restraint seats.  REAR SEAT REMINDER4 Rear Seat Reminder does not detect people, animals or objects in the back seat. It only registers when a rear door has been opened. Can be turned off in in your vehicle's Settings menu.  SAFETY ALERT SEAT3 Safety Alert Seat uses left-, right- or both-side driver seat vibration pulses to help you detect and identify the direction of potential crashes. You can also switch to beeping crash avoidance alerts.  SEAT BELTS4 3-point, all positions, includes front and rear seat belt pretensioners  SEAT BELT INDICATORS4 Driver, front passenger and rear passengers.  STABILITRAK Stability Control System with Proactive Roll Avoidance and traction control, includes electronic trailer sway control and hill start assist.  REAR PARK ASSIST3 Rear Park Assist provides alerts of nearby detected vehicle and objects behind your vehicle to help you park	AIRBAGS <sup>4</sup>	Frontal, knee and seat-mounted side-impact for driver and front passenger, and roof-rail mounted head-curtain for outboard seating positions. Includes Passenger Sensing System for front passenger.			
REAR SEAT REMINDER <sup>4</sup> Rear Seat Reminder does not detect people, animals or objects in the back seat. It only registers when a rear door has been opened. Can be turned off in in your vehicle's Settings menu.  Safety Alert Seat uses left-, right- or both-side driver seat vibration pulses to help you detect and identify the direction of potential crashes. You can also switch to beeping crash avoidance alerts.  SEAT BELTS <sup>4</sup> 3-point, all positions, includes front and rear seat belt pretensioners  SEAT BELT INDICATORS <sup>4</sup> Driver, front passenger and rear passengers.  STABILITRAK Stability Control System with Proactive Roll Avoidance and traction control, includes electronic trailer sway control and hill start assist.  REAR PARK ASSIST <sup>3</sup> Rear Park Assist provides alerts of nearby detected vehicle and objects behind your vehicle to help you park	BUCKLE TO DRIVE	encourages seat belt use, can be turned on and off in Settings or Teen Driver menu This feature is defaulted off for			
has been opened. Can be turned off in in your vehicle's Settings menu.  SAFETY ALERT SEAT3 Safety Alert Seat uses left-, right- or both-side driver seat vibration pulses to help you detect and identify the direction of potential crashes. You can also switch to beeping crash avoidance alerts.  SEAT BELTS4 3-point, all positions, includes front and rear seat belt pretensioners  Driver, front passenger and rear passengers.  STABILITRAK Stability Control System with Proactive Roll Avoidance and traction control, includes electronic trailer sway control and hill start assist.  REAR PARK ASSIST3 Rear Park Assist provides alerts of nearby detected vehicle and objects behind your vehicle to help you park	LATCH SYSTEM <sup>4</sup>	(Lower Anchors and Tethers for CHildren), for child child restraint seats.			
direction of potential crashes. You can also switch to beeping crash avoidance alerts.  SEAT BELTS <sup>4</sup> 3-point, all positions, includes front and rear seat belt pretensioners  Driver, front passenger and rear passengers.  STABILITRAK Stability Control System with Proactive Roll Avoidance and traction control, includes electronic trailer sway control and hill start assist.  REAR PARK ASSIST <sup>3</sup> Rear Park Assist provides alerts of nearby detected vehicle and objects behind your vehicle to help you park	REAR SEAT REMINDER <sup>4</sup>				
SEAT BELT INDICATORS <sup>4</sup> Driver, front passenger and rear passengers.  STABILITRAK Stability Control System with Proactive Roll Avoidance and traction control, includes electronic trailer sway control and hill start assist.  REAR PARK ASSIST <sup>3</sup> Rear Park Assist provides alerts of nearby detected vehicle and objects behind your vehicle to help you park	SAFETY ALERT SEAT <sup>3</sup>				
STABILITRAK Stability Control System with Proactive Roll Avoidance and traction control, includes electronic trailer sway control and hill start assist.  REAR PARK ASSIST <sup>3</sup> Rear Park Assist provides alerts of nearby detected vehicle and objects behind your vehicle to help you park	SEAT BELTS <sup>4</sup>	· · · · · · · · · · · · · · · · · · ·			
control and hill start assist.  REAR PARK ASSIST <sup>3</sup> Rear Park Assist provides alerts of nearby detected vehicle and objects behind your vehicle to help you park	SEAT BELT INDICATORS <sup>4</sup>	Driver, front passenger and rear passengers.			
REAR PARK ASSIST <sup>3</sup> Rear Park Assist provides alerts of nearby detected vehicle and objects behind your vehicle to help you park	STABILITRAK				
	REAR PARK ASSIST <sup>3</sup>				

<sup>1.</sup> Feature may be limited when the battery temperatures are extremely cold or hot or when battery is near full charge. See Owner's Manual for details. 2. Ultifi is pre-production and is subject to change. Actual features, functionality, and product limitations may vary. 3. Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Visibility, weather, and road conditions may affect feature performance. Read the vehicle's owner's manual for more important feature limitations and information. 4. Always use seat belts and child restraints. Children are safer when properly secured in a rear seat in the appropriate child restraint. See the Owner's Manual for more information.



STANDARD HEAVY-DUTY STEEL WHEEL WITH FIRESTONE FIREHAWK PURSUIT TIRE

# STANDARD 9C1, 9C3 TIRES

MANUFACTURER	QUANTITY	SIZE	SPEED RATING	TYPE
Firestone	4	265/50R20	V	All-Season Firehawk
	'	'		Pursuit Blackwall

#### NOTE:

Due to specific requirements for performance durability and safety, GM recommends only the original equipment tires for replacement. Tire Plies = Tread 6 ply; 2 Polyester, 2 Steel, 2 Nylon, Sidewall, 2 Polyester

**Tire Chains** - If the vehicle is equipped with tire size 265/50R20, use tire winter traction devices only where legal and only when necessary. Only use textile traction devices, such as tire snow socks, that are the proper size for the tires. Traction devices must be installed only on the tires of the drive axle. Drive slowly and follow the traction device manufacturer's instructions. Driving too fast or spinning the wheels can damage the traction device.

## OPTIONAL INTERIOR FEATURES

- **5G WI-FI HOTSPOT** Included and only available with (UE1) OnStar. Terms and limitations apply. See onstar.com or dealer for details. Service varies with conditions and location. Requires active service plan and paid AT&T data plan. See OnStar. com/BusinessSolutions for details and limitations. Availability subject to change. Vehicle must be on or in the accessory position for Wi-Fi to function.
- NAM GOOGLE AUTOMOTIVE SERVICES included and only available with (UE1) OnStar.
- **KEYS/FOBS** Provides a single mechanical key code that is common to the driver door lock/unlock of the entire Blazer EV fleet with the same code. Also provides a single calibration for the remote keys to keyless open/keyless start on all fleet vehicles with this option. Includes (AU7) common fleet key. Requires (AMF) Remote Key Package. Not available with SEO (6E8) complete vehicle fleet common key.
- **6E8 KEYS/FOBS** Provides a single mechanical key code that is common to the driver door lock/unlock of the entire Blazer EV fleet with the same code. Also provides a single calibration for the remote keys to keyless open/keyless start on all fleet vehicles with this option.

  Includes (AU7) common fleet key. Requires (AMF) Remote Key Package. Not available with SEO (6E8) complete vehicle fleet common key.
- **AMF REMOTE KEYLESS ENTRY PACKAGE** Includes 4 additional transmitters, NOTE: programming of remotes is at customer's expense. Programming remotes is not a warranty expense.
- **T53 LAMPS** Alternate flashing Red & Blue rear compartment lid warning (visible when liftgate is open) and controlled by momentary liftgate mounted switch or ground wire.
- **VAV FLOOR MATS -** All-weather floor mats (not available on 9C1)
- **6C7 LIGHTING -** Red and white LED auxiliary dome lamp is located on headliner between front row seats. The auxiliary lamp is wired independently from standard dome lamp.
- **REAR DOOR LOCKS AND HANDLES INOPERATIVE** Rear power locks are inoperable at rear door but operate from drivers position, rear doors can be opened only from outside the vehicle. Includes (VBO) Kerr Industries Ship-thru to mechanically remove hardware linkage.
- **6N5 REAR DOOR WINDOW SWITCHES INOPERATIVE** Calibration for rear windows to operate from drivers position only. Window lockout switch remains illuminated in all positions when equipped with this feature.

#### OPTIONAL EXTERIOR FEATURES

- **9G8 LIGHTING DELETE** Daytime Running Lamps and automatic headlamp control delete. Deletes standard Daytime Running Lamps and automatic headlamp control features, also disables automatic interior courtesy lighting.
- 5T4 SPECIAL PAINT Victory Red WA 9260. Requires SEO (TGK) special paint solid.
- 9W5 SPECIAL PAINT Silver Ice Metallic WA 636R. Requires SEO (TGK) special paint solid.
- 9V7 SPECIAL PAINT Dark Blue Metallic WA 722J. Requires SEO (TGK) special paint solid.
- 9V2 SPECIAL PAINT MSP Blue Goose.
- **6JE BLUE LEFT / BLUE RIGHT WHELEN LED ION LIGHT PACKAGE** Two ION light heads mounted on each exterior corner. Not available with 6JG, 6J9 or 6J8 Package.
- AKP LIFTGATE GLASS Solar absorbing, non-tinted rear liftgate glass. Replaces tinted rear liftgate glass (AKO).
- **REAR GLASS -** Tinted rear window and rear quarter panel glass. Replaces solar absorbing non-tinted, rear window and rear quarter panel glass (ARS).
- **6JG RED LEFT / BLUE RIGHT WHELEN LED ION LIGHT PACKAGE** Two ION light heads mounted on each exterior corner. Not available with 6JE, 6J9 or 6J8 Package.
- **6J9 RED LEFT / RED RIGHT WHELEN LED ION LIGHT PACKAGE** Two ION light heads mounted on each exterior corner. Not available with 6JG, 6JG or 6J8 Package.
- **6J8** WHITE LEFT / WHITE RIGHT WHELEN LED ION LIGHT PACKAGE Two ION light heads mounted on each exterior corner. Not available with 6JG, 6J9 or 6J9 Package.
- **TGK** SPECIAL PAINT SOLID Special paint, one color. Required with any special paint selection. Refer to individual special paint SEO codes for details on body colored non-sheet metal parts. May require extended lead time.
- 7X3 SPOTLAMP Left hand, pillar-mounted unity, 6-inch with LED lamps; independently fused
  - NOTE: Factory installation of spotlamps are recommended. Special tooling is used to locate and drill the spotlamp shaft hole in the pillars. (Interior trim covers provided with factory installed lamps are not available as service parts). Field installation of spotlamps must not interfere with proper deployment of the roof rail mounted head-curtian airbags in the event of a crash.

#### OPTIONAL ELECTRICAL FEATURES

- **5J1 CALIBRATION** Disables the following standard features: Entry Lighting and Exit Lighting, Remote Keyless Entry Feedback (Horn Beep, Lamps Flash, and Panic Alarm).
- PSC DUAL LEVEL CHARGE CORD Includes dual-mode, portable, 120-volt (1.4 kW) and 240-volt (7.7 kW) capability, swappable nema 5-15 and NEMA 14-50 plugs with SAE J1772 vehicle connection.
- **1MP SMARTPHONE APP REMOTE START -** Only available with OnStar.
- UTQ THEFT DETERRENT SYSTEM DISABLE The alarm and horn become non-functional in an attempt of theft to the vehicle (recommended for vehicles utilizing 6E2 or 6E8 key codes).
- **WX7 WIRING** Auxiliary speaker. For upfitter connection to front door and windshield speakers.
- **6J3 WIRING** For grille lamps and siren speaker
- **6J4** WIRING For horn and siren.

## OPTIONAL MECHANICAL FEATURES

- **GM ENVOLVE STARTER KIT I -** Provides customers and drivers with access to comprehensive training and educational content on EV. topics Requires one of the following Fleet or Government order types: FLS, FNR, FRC, FBC, FGO or FEF. Requires one of the following OnStar Insights services: (POV) 12 Months, (POW) 24 Months, (POX) 36 Months, (POY) 48 Months, or (POZ) 60 Months. Not available with a ship-to of Guam, Puerto Rico or the Virgin Islands.
- **STREET APPEARANCE PACKAGE -** 22" machined-face aluminum wheels with carbon flash painted pockets, 275/40R22 all-season self-sealing blackwall tires, non-asbestos organic brake lining and FNC brake rotor Police Pursuit. Brake and Tire package is not designed for Pursuit. Requires 9C3 Package which includes retail floor console, armrest, color-keyed carpeting in occupant area and black cloth front and rear seating with cup-holders.
- V92 TRAILERING PROVISIONS Includes; Wiring, (CTT) Hitch Guidance and (PZ8) Hitch View
- **SDE** TRAILER HITCH Removable 2" (Class 2.) receiver. Requires (V92) trailering provisions and (VLG) trailer hitch trim bezel.
- VLG TRAILER HITCH TRIM BEZEL Dealer installation trim. Requires (SDE) trailer hitch.

#### OPTIONAL SHIP THRU

- VBO SHIP THRU Produced in GM Ramos and shipped to Kerr Industries Ramos, Returned to GM Ramos for shipping to final destination.

  Included with (6C7) Red and white LED auxiliary dome lamp, (6J8) White Left/White Right Whelen ION LED Lamp Package, (6J9) Red Left/
  Red Right Whelen LED ION Lamp Package, (6JE) Blue Left/Blue Right Whelen LED ION Lamp Package, (6JG) Red Left/Blue Right Whelen
  LED ION Lamp Package, (6N6), inside rear doors inoperative door locks and handles, (7X3) left-hand, LED spotlamp and (T53) alternate
  flashing Red & Blue rear compartment lid warning lamps.
- (TVU) SHIP THRU Produced in GM Ramos and shipped to Defender Supply. Shipped from Ramos to Argyle location for upfit and back to Arlington for final destination.
- (TBP) SHIP THRU Produced in GM Ramos and shipped to Kerr Industries of Texas, Returned to GM Arlington Plant for shipping to final destination.



# 5W4 SPECIAL SERVICE STREET APPEARANCE PACKAGE

# OPTIONAL 5W4 WHEELS AND TIRES

MANUFACTURER	QUANTITY	SIZE	SPEED RATING	TYPE
Michelin	4	265/40R22	V	All-Season
	ı	I	1	Self-Sealing Blackwall

#### NOTE:

Due to specific requirements for performance durability and safety, GM recommends only the original equipment tires for replacement.

# EMISSIONS - ZERO EMISSIONS VEHICLE (ZEV)

FE9	Emissions, Federal requirements
NE1	Emissions, Colorado, Connecticut, Delaware, Maine, Maryland, Massachusetts, Minnesota, Nevada, New Jersey, New York,
	Oregon, Pennsylvania, Rhode Island, Vermont, Virginia and Washington state requirements
YF5	Emissions, California state requirements
NB8	Emissions override, California (allows a dealer in states that require California emissions - California, Colorado, Connecticut,
	Delaware, Maryland, Massachusetts, Minnesota, Nevada, New Jersey, New York, Oregon, Pennsylvania, Rhode Island, Virginia
	or Washington - to order Federal emissions for a vehicle that will be registered in a state that has Federal emission
	requirements). Do not use for vehicles that will be registered in California, Colorado, Connecticut, Delaware, Maryland,
	Massachusetts, Minnesota, Nevada, New Jersey, New York, Oregon, Pennsylvania, Rhode Island, Virginia or Washington.
NB9	Emissions override, state-specific (for dealers ordering vehicles in (YF5) or (NE1) emission states - California, Colorado,
	Connecticut, Delaware, Maine, Maryland, Massachusetts, Minnesota, Nevada, New Jersey, New York, Oregon, Pennsylvania,
	Rhode Island, Vermont, Virginia and Washington)". Also updated footnote 1 to now read "Allows a California dealer (YF5
	emissions) to order (NE1) emissions with (NB9) emissions override code for registration in (NE1) states; or, a Colorado,
	Connecticut, Delaware, Maine, Massachusetts, Minnesota, Nevada, New Jersey, New York, Oregon, Pennsylvania, Rhode
	Island, Vermont, Virginia and Washington dealer (NE1 emissions) to order (YF5) emissions with (NB9) emissions override
	code for registration in California.
NC7	Emissions override, Federal (for vehicles ordered by dealers in Federal emission states with (YF5) or (NE1) emissions - Not
	required for vehicles being shipped to California, Colorado, Connecticut, Delaware, Maine, Maryland, Massachusetts,
	Minnesota, Nevada, New Jersey, New York, Oregon, Pennsylvania, Rhode Island, Vermont, Virginia or Washington)". Also
	updated footnote 1 to now read "Requires (YF5) California state emissions requirements or (NE1) Colorado, Connecticut,
	Delaware, Maine, Massachusetts, Minnesota, Nevada, New Jersey, New York, Oregon, Pennsylvania, Rhode Island, Vermont,
	Virginia or Washington state emissions requirements.

FE9 NAME CERTIFICATION EMISSION, FEDERAL
NEI NAME CERTIFICATION EMISSION, GEOGRAPHICALLY RESTRICTED
YF5 NAME CERTIFICATION EMISSION, CALIFORNIA is certified to EPA Tier 3 BIN 70 standards and qualifies as ULEV 70 (Ultra Low Emission Vehicle)
under California Air Resources Board (CARB) requirements, meaning it is 50-state certified.
EPA engine family or test group: MGMXT05.3388



**ULTIUM PLATFORM** 

# **SPECIFICATIONS**

#### DUAL MOTOR ALL WHEEL DRIVE (MPH/KPH)

Model	1MF26
Projected top speed <sup>1</sup>	130/209
Projected top speed in reverse	25/40
Projected distance to reach top speed <sup>1</sup> (miles/km)	0.76/1.22
Acceleration <sup>1</sup> 0-20 mph (sec.)	1.66
Acceleration <sup>1</sup> 0-30 mph (sec.)	2.48
Acceleration <sup>1</sup> 0-40 mph (sec.)	3.30
Acceleration <sup>1</sup> 0-50 mph (sec.)	4.13
Acceleration <sup>1</sup> 0-60 mph (sec.)	5.08
Acceleration <sup>1</sup> 0-70 mph (sec.)	6.21
Acceleration <sup>1</sup> 0-80 mph (sec.)	7.59
Acceleration <sup>1</sup> 0-90 mph (sec.)	9.27
Acceleration 0-100 mph (sec.)	11.23

#### RANGE ON A FULL CHARGE

GM Estimated range without Emergency Equipment (miles/km)	297/478
GM Estimated range with Emergency Equipment <sup>7</sup> (miles/km)	274/441
Note: EPA-ESTIMATED ratings are official, not estimate based on	GM testing

#### **VEHICLE WEIGHT (LBS./KG.)**

Seating Capacity	2/3
GVWR <sup>3</sup> (Gross Vehicle Weight Rating)	6945/3150
FGAWR (Front Gross Axle Weight Rating)	1550/703
RGAWR (Rear Gross Axle Weight Rating)	1700/771
Payload <sup>4</sup>	904/410
Base curb weight	5870/2663
Maximum Trailering Capacity <sup>5</sup>	1,000/454

#### PASSENGER COMPARTMENT VOLUME (cu.ft./liters)

Passenger Volume Front Row	58/1642
Passenger Volume Second Row	25.7/728
Cargo Volume With Rear Seat Up	26.2/742

#### FRONT COMPARTMENT (in./mm)

Head room	40.88/1038
Shoulder room, 1st row	58.70/1491
Hip room, 1st row	57.40/1458
Leg room, 1st row, max	44.20/1123

#### REAR COMPARTMENT (in./mm)

Head room	38.10/968
Shoulder room	58.33/1482
Hip room	53.79/1366
Leg room	38.92/989

#### CARGO (in./mm)

Load floor length to center of front seat at floor	71/1804
Load floor length to center of 2nd seat at floor at seat	25/889
Inside width between wheelhouse	42/1067
Cargo area width	47.2/1200
Cargo area length	36.9/937
Cargo area height (headliner limited)	26.8/681
Cargo volume <sup>2</sup> maximum behind front seat (cu. ft./liters)	59.1/1673.7
Cargo volume <sup>2</sup> maximum behind second seat (cu. ft./liters)	25.5/722.2

#### EXTERIOR (in./mm)

Wheelbase	121.80/3094
Overall length	192.62/4893
Overall width, without mirrors	78.02/1982
Overall width, including mirrors	86.50/2197
Overall height <sup>6</sup>	64.78/1645
Lift in height <sup>6</sup> (Top of load floor to groun	nd) 29.40/747
Front track width	65.90/1674
Rear track width	65.90/1674
Turning diameter curb to curb (ft./m)	39.7/12.1
Approach angle	19 degrees
Departure angle	22 degrees
Breakover angle	15 degrees
Ground Clearance	6.5/166
Overhang, front	35.09/891
Overhang, rear	35.37/898
Fording depth	12in/304.8mm @ 6.2mph/10kph

<sup>1.</sup> Based on 2025MY Michigan State Police Vehicle Test Results. All vehicles tested with clean roof and no additional equipment or added ballast. Adding non dealer accessories or making modifications to the vehicle can affect vehicle performance, aerodynamics, overall top speed and acceleration. 2. Cargo and load capacity limited by weight and distribution.

<sup>3.</sup> Gross Vehicle Weight Rating (GVWR). When properly equipped, includes vehicle, passengers, cargo and equipment. 4. These maximum payload ratings are intended for comparison purposes only. Before you buy a vehicle or use it to haul people or cargo, carefully review the vehicle loading section of the Owner's Manual and check the carrying capacity of your specific vehicle on the label on the inside of the driver's door jamb. 5. Maximum trailering ratings are intended for comparison purposes only. Before you buy a vehicle or use it for trailering, carefully review the trailering section of the Owner's Manual. The trailering capacity of your specific vehicle may vary. The weight of passengers, cargo and options or accessories may reduce the amount you can trailer. 6. Published dimension indicated is from ground and without optional equipment or accessories. Additional accessories or equipment ordered at the customer's request can result in a minor change in this dimension. 7. On a full charge based on development testing and/or analytical projection consistent with SAE JI634 revision 2017 - MCT. Range subject to change prior to production. Actual range may vary based on several factors, including ambient temperature, terrain, battery age and condition, loading, and how you use and maintain your vehicle. EPA estimates not yet available.

# **SPECIFICATIONS**

# PROPULSION SYSTEMSSTANDARDTypeUltium Performance Dual Motor All Wheel DriveMotor2-Motor Permanent Magnetic DrivePower on a full charge (hp/kW)498/372Torque on a full charge (lb.ft./Nm)531/720

#### **DRIVE BATTERY**

Туре	Rechargeable energy	storage system with 12-module pack
	0 0.	
Mass (lb / kg)		947 / 430
Battery chem	istry	Lithium-ion
Cells		288
Energy		102 kWh
Projected Ran	ige1(mi/km)	250/402
Warranty2		8 years / 100,000 miles of battery
		and electric components coverage

#### **BRAKES**

eBoost ABS	Disc/Disc
Front rotor diameter (in./mm)	15/381
Rear rotor diameter (in./mm)	13.5/343
Front rotor thickness (in./mm)	1.26/32
Rear rotor thickness (in./mm)	0.79/20
9C1 Projected Stopping Distance from 60.0 mph (ft.) <sup>5</sup>	128.16

#### TIRES

Туре	Firestone Firehawk Pursuit, V-rated, All-season
Size	265/50R20

#### WHEELS

Туре	Black Steel with bolt on aluminum center cap
Size	20"x 9"

#### **CHASSIS**

Suspension	Heavy-duty police-rated suspension with unique
	StabiliTrak performance calibration.
Steering type	Power, non-variable ratio, electric
Steering ratio	15.98:1

#### **SERVICE BATTERIES**

Туре	Maintenance free
BCI group size	LN1
Volts	12 V
Amp hour rating	50 ah
Reserve capacity	80 min
Cold cranking-amps	520 a

#### LEVEL 1 RESIDENTIAL CHARGING

#### LEVEL 2 RESIDENTIAL CHARGING<sup>3</sup>

240-Volt (11.5kW/48-amps)	Provides up to 37 miles of range per hour
240-Volt (19.2kW/80-amps)	Provides up to 52 miles of range per hour

#### LEVEL 3 DC FAST CHARGING<sup>4</sup>

400-Volt 190 Kilowatt

Provides up to 71-miles of range in 10-minutes or 141-miles of range in approximately 30-minutes



# DC FAST CHARGING CAPABLE

1. Requires professional installation of a compatible outlet. Actual charge times will vary based on battery starting state of charge, battery condition, output of charger, vehicle settings and outside temperature. See the vehicle's Owner's Manual for additional limitations. 2. Limited warranty. Whichever comes first. See dealer for details. See owner's manual for additional limitations. 3. Requires public charge station or professionally installed dedicated charge station, sold separately. Actual charge times will vary based on battery starting state of charge, battery condition, output of charger, vehicle settings and outside temperature. See the vehicle's Owner's Manual for additional limitations. 4. Requires public DC Fast Charger. Actual charge times will vary based on battery starting state of charge, battery condition, output of charger, vehicle settings and outside temperature. See the vehicle's Owner's Manual for additional limitations. 5. Based on 2025MY Michigan State Police Vehicle Test Results. All vehicles tested with clean roof and no additional equipment or added ballast. Adding non dealer accessories or making modifications to the vehicle can affect vehicle performance, aerodynamics, overall top speed and acceleration.

# AVAILABLE EXTERIOR COLORS ACTUAL COLORS MAY VARY



Summit White WA-8624



Black WA-8555



Riptide Blue Metallic WA-121J



Galaxy Gray Metallic WA-127J



Radiant Red Tintcoat\* WA-170H



Sterling Gray Metallic WA-130H \*Available at extra cost

# SEO PAINT AVAILABLE<sup>1</sup> ACTUAL COLORS MAY VARY



Victory Red WA-9260



Silver Ice Metallic WA-636R



Dark Blue Metallic WA-722J



MSP Blue Goose WA-5665

#### NOTE:

Actual color may very

# AVAILABLE INTERIOR COLOR ACTUAL COLORS MAY VARY





Black cloth Front Black vinyl Rear 9C1 only




Black cloth Front and Rear 9C3, 5W4 only



Blazer EV 9C1 Interior




Blazer EV 9C3, 5W4 Interior

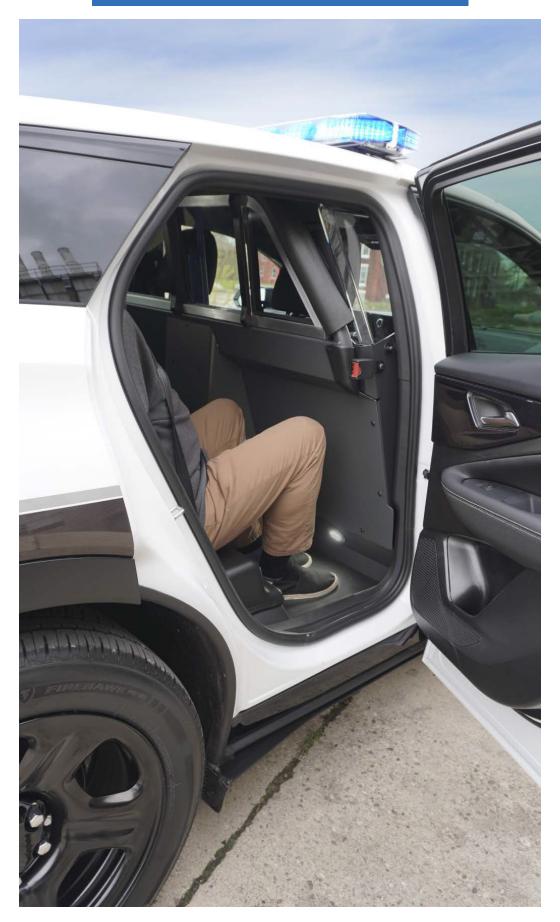

REAR ACCOMODATIONS

Shown with equipment from independent suppliers not covered by the GM New Vehicle Limited Warranty GM is not responsible for the safety or quality of independent supplier alterations.


## **APPROACH AND DEPARTURE ANGLES**

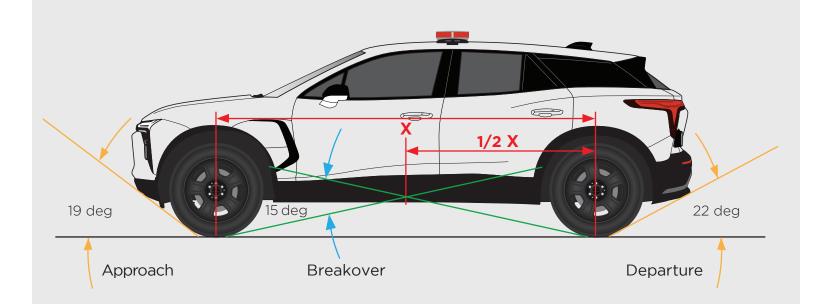


Approach Angle Departure Angle Breakover Angle Ground Clearance Wheelbase (X) Overhang, front Overhang, rear

PPV Blazer EV AWD
19 degrees
22 degrees
15 degrees
7.49 in. / 190 mm
121.80 in. / 3094 mm
35.09 in. / 891 mm
5.37 in. / 898 mm


#### **DIMENSIONS**

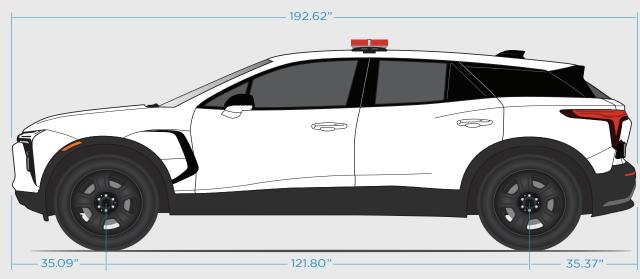

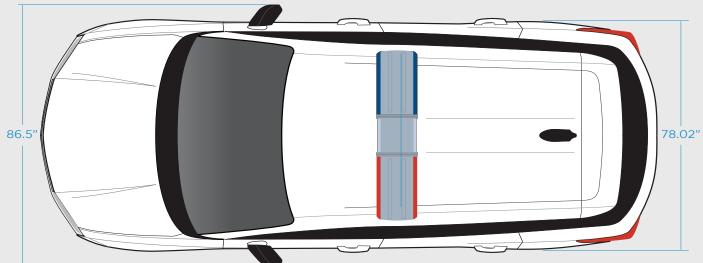


## Estimated material sizes to wrap:


- Hood 50" x 72"
- Front Doors 57" x 34"
- Rear Doors 52" x 35"
- Roof 112" x 60"
- Front Clip 40" x 115"
- Rear Clip 38" x 70"
- Front Quarter 56" x 32"
- Rear Quarter 42" x 32"

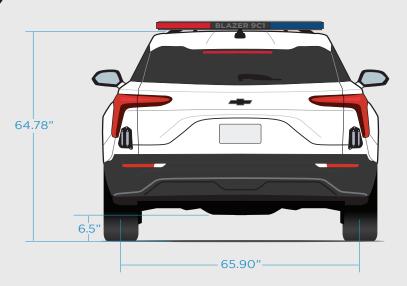


# UNITED STATES CERTIFIED SPEEDOMETER/CLUSTER (CANADIAN SIMILAR)

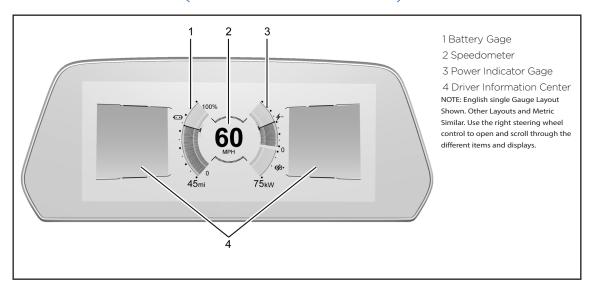

# RADIO, SIREN/FLASHERS CONTROLS

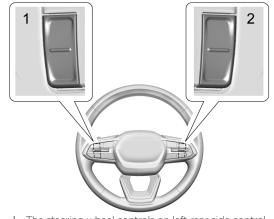

- The steering wheel controls on left rear side control momentary output for two-way radio microphone and latching for siren/flashers.
- 2. Volume: Press to increase or decrease the volume.

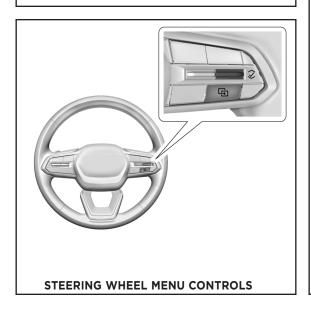

## 2025 BLAZER EV PPV SPEEDOMETER CERTIFICATION CALIBRATION

"To Whom it May Concern;

The speedometer system in the 2025MY Police Blazer EV is equipped with an electronically controlled speedometer which is designed to be accurate +/-3 km/h (+/2 mph) through its range of function. The Police Package speedometer is calibrated with (XFD performance dual motor all wheel drive), electrified propulsion system, and 265/50R20 SL 107V rated tires (QH9). Specifications are at temperatures of -23 to 49 °C (-10 to 120 °F). Inaccuracies due to vehicle speed sensing are included.

GM specified vehicle maintenance is required to maintain the stated accuracy of the speedometer system. The accuracy of the speedometer system is dependent on and affected by the required vehicle maintenance including; following placard tire inflation pressure of 39 psi, monitoring tire wear as directed by the owner's manual, tire replacement with all-season Firestone Firehawk Pursuit 265/50 R20 tires, maintaining original OEM driveline ratios, maintaining original OEM electronic module calibration files and following vehicle loading limitations.

Regards,

Sean O'Shea

Police Vehicle Program Manager

# VEHICLE TOUCH SCREEN SETTINGS



# **VEHICLE PERSONALIZATION MENU**

The Personalization Menu is accessed by:
Item setting
Important features in the VEHICLE SETTINGS sub-menu that can be changed are:
Rear Seat Reminder <sup>1</sup>
Buckle to Drive
Collision Detection <sup>2</sup>
Comfort and Convenience
Lighting
Power Locks
Safety Alert Seat <sup>2</sup>

See the Owner's Manual for a complete Vehicle Personalization Menu listing of items that may be available for your vehicle.

<sup>1.</sup> Does not detect people or items. Always check rear seat before exiting. 2. Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Visibility, weather, and road conditions may affect feature performance. Read the vehicle's owner's manual for more important feature limitations and information.

#### STANDARD INTERIOR FEATURES

# REAR CAMERA MIRROR



Inside rearview auto-dimming with full camera display. Includes (CWA) Rear Camera Mirror Washer.

This automatic dimming mirror provides a wide angle camera view of the area behind the vehicle. Pull the tab to turn on the display. Push the tab to turn it off. When off the mirror is automatic dimming. Adjust the mirror for a clear view of the area behind the vehicle while the display is off.

WARNING: The Rear Camera Mirror (RCM) has a limited view. Portions of the road,

Vehicles, and other objects may not be seen. Do not drive or park the vehicle using only this camera. Objects may appear closer than they are. Check the outside mirrors or glance over your shoulder when making lane changes or merging. Failure to use proper care may result in injury, death, or vehicle damage.

The Rear Camera Mirror may not work properly or display a clear image if:.

There is glare from the sun or headlamps.

This may obstruct objects from view. If needed, push the tab to turn off the display.

Dirt, snow, or other debris blocks the camera lens. Clean the lens with Rear Camera Washer or a soft damp cloth.

The camera's mounting on the vehicle has been damaged, and/or the position or the mounting angle of the camera has changed.

Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Visibility, weather, and road conditions may affect feature performance. Read the vehicle's owner's manual for more important feature limitations and information.

## REAR SEAT REMINDER

The message REAR SEAT REMINDER LOOK IN REAR SEAT displays under certain conditions indicating there may be an item or passenger in the rear seat. Check before exiting the vehicle. This feature will activate when a second row door is opened while the vehicle is on or up to 10 minutes before the vehicle is turned on. There will be an alert when the vehicle is turned off. The alert does not directly detect objects in the rear seat; instead, under certain conditions, it detects when a rear door is opened and closed, indicating that there may be something in the rear seat.

The feature is active only once each time the vehicle is turned on and off, and will require reactivation by opening and closing the second row doors. There may be an alert even when there is nothing in the rear seat; for example, if a child entered the vehicle through the rear door and left the vehicle without the vehicle being shut off.

The feature can be turned on or off. Select Settings > Vehicle > Rear Seat Reminder > ON or OFF.

Note: Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. Read the vehicle's Owner's Manual for important safety and driver assistance feature limitations and information

## STANDARD SAFETY FEATURES


# SAFETY ALERT SEAT<sup>1</sup>





The driver seat cushion may provide a vibrating pulse alert or audible beeping. To change settings from the infotainment screen, touch Settings > Vehicle > Collision/Detection Systems. Keep these areas of the vehicle clean and clear of obstacles to ensure the best driver assistance feature performance. Driver Information Center (DIC) messages may display when the systems are unavailable or blocked.

# REAR PARK ASSIST<sup>1</sup>

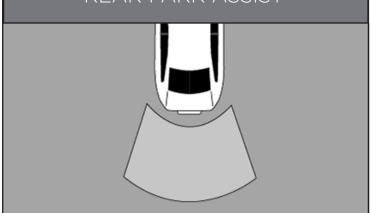

The cluster may display a Park Assist amphitheater-like display with bars that represent the estimated location of a detected object and the vehicle's distance from the object. As a detected object becomes closer, more bars light up and change color from yellow to amber to red. When an object is first detected in the rear, one beep will be heard from the rear, or the SAFETY SEAT will pulse two times, When an object is very close, five beeps will sound from the rear or the SAFETY SEAT will pulse five times.

The Park Assist System is no substitute for careful and attentive driving. The Park Assist system does not detect children, pedestrians, bicyclists, animals, or objects located below the bumper or that are too close or too far from the vehicle. It is not available at speeds greater than 9 km/h (6 mph). To prevent injury, death, or vehicle damage, even with Park Assist, always check the area around the vehicle and check all mirrors before moving forward or backing.


The REAR Park Assist System can be turned on or off using the infotainment system. To view available settings from the infotainment home screen, touch Settings > Vehicle > Collision/Detection Systems.

## HD REAR VISION CAMERA<sup>1</sup>



 - 1. View Displayed by the Camera in Radio Screen
- 2. Corners of the Rear Bumper

Displayed images may be farther or closer than they appear. The area displayed is limited and objects that are close to either corner of the bumper or under the bumper do not display.




The camera(s) do not display children, pedestrians, bicyclists, crossing traffic, animals, or any other object outside of the cameras' field of view, below the bumper, or under the vehicle. Shown distances may be different from actual distances. Do not drive or park the vehicle using only these camera(s). Always check behind and around the vehicle before driving. Failure to use proper care may result in injury, death, or vehicle damage.

<sup>1.</sup> Safety or driver assistance features are no substitute for the driver's responsibil-ity to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Visibility, weather, and road conditions may affect feature performance. Read the vehicle's owner's manual for more important feature limitations and information.

#### STANDARD INTERIOR FEATURES

# OnStar® (UE1)

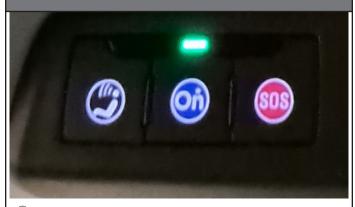

- Voice Command Button
- On Blue OnStar® Button
- some Emergency Button

This vehicle is equipped with a comprehensive, in-vehicle system that can connect to a live OnStar® Advisor for Emergency, Security, Navigation, Connection, and Diagnostic Services. OnStar® services may require a paid subscription. OnStar® requires the vehicle battery and electrical system, cellular service, and GPS satellite signals to be available and operating. OnStar® acts as a link to existing public emergency service providers. OnStar® may collect information about you and your vehicle, including location information. See OnStar®'s Terms and Conditions and Privacy Statement for more details including system limitations at www.OnStar.com (U.S.) or www.OnStar®.ca (Canada). The OnStar® system status light is

- next to the OnStar® buttons. If the status light is:
- Solid Green: System is on.Flashing Green: On a call.
- Flashing Green: On a call
- Red: <u>In</u>dicates a problem.
- Off: System is off. Press the blue OnStar® button twice to speak with an OnStar® Advisor.

#### Press 🥙 to

- Make a call, end a call, or answer an incoming call.
- Give OnStar® Hands-Free Calling voice commands.

NOTE: Do not activate  $\textsc{OnStar}^{\ensuremath{\text{\tiny B}}}$  if you have no plans on using this feature

#### STANDARD MECHANICAL FEATURES

## SERVICE PARTS IDENTIFICATION LABEL

SPID Label Content Now Included with Certification Label. The Service Parts Identification (SPID) label, often located in the trunk or glovebox of a vehicle, lists a vehicle's VIN, RPO codes and other information that identify the content of the vehicle. Beginning with the 2018 model year, much of this information will be available through a QR code on the Certification label.



Software to read the QR code is commonly available for any Android, iPhone or Windows smartphone. Many basic applications can be downloaded for free. Tested QR code readers that are easy to use include NeoReader by NM LLC, inigma by 3GVision, QR Scanner by Honestly App, QR Droid by DroidLa and Bar-Code by PW2. GM does not recommended any particular software. Once the QR code is scanned, the vehicle information will appear in the following order: VIN, Model Year, Model, Build Month, Year, MOTORering Book, Vehicle Order Number, 3 Digit RPO Codes sorted alphanumerically, and the Paint Code (same code appears in the lower left of the QR code).

#### STABILITRAK CONTROL

The vehicle has a Traction Control System (TCS) and StabiliTrak/Electronic Stability Control (ESC), an electronic stability control system. These systems help limit wheel slip and assist the driver in maintaining control, especially on slippery road conditions.

TCS activates if it senses that any of the drive wheels are spinning or beginning to lose traction. When this happens, TCS applies the brakes to the spinning wheels and reduces propulsion system power to limit wheel spin.

StabiliTrak/ESC activates when the vehicle senses a difference between the intended path and the direction the vehicle is actually traveling. StabiliTrak/ESC selectively applies braking pressure to any one of the vehicle wheel brakes to assist the driver in keeping the vehicle on the intended path.

If TCS is limiting wheel spin when g is pressed, the system will not turn off until the wheels stop spinning.

If cruise control is being used and TCS or StabiliTrak/ESC begins to limit wheel spin, cruise control will disengage. Cruise control may be turned back on when road conditions allow.

Both systems come on automatically when the vehicle is started and begins to move. The systems may be heard or felt while they are operating or while performing diagnostic checks. This is normal and does not mean there is a problem with the vehicle.

It is recommended to leave both systems on for normal driving conditions, but it may be necessary to turn TCS off if the vehicle gets stuck in sand, mud, ice, or snow. See "Turning the Systems Off and On" later in this section.

Safety or driver assistance features are no substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Visibility, weather, and road conditions may affect feature performance. Read the vehicle's owner's manual for more important feature limitations and information.

#### STANDARD FLECTRICAL FEATURES

# UNIVERSAL VEHICLE MODULE (KGU)

Provides CAN Readability of selected messages utilizing SAE J1939 formatting. This gateway module offers 10-switchable inputs and outputs, and includes a GUI (Graphical User Interface) SW available to customize the UVM to specific customer needs. Provides access to key vehicle information (CAN Serial Data) and buffer between our Cybersecure vehicle architecture and the "dirty work" side. For instructional videos refer to https://www.gmupfitter.com/instructional-videos/

#### 4 Preprogramed Commanded Features (Specified Input Voltage Range)

- Automatic Vehicle Start
  - Input request commands underhood electrical center start up for up to 8 hours or Low power condition
- Shut Down Inhibit
  - Input request prevents underhood electrical center shutdown
- Increased Engine Idle
  - -Input request commands engine idle to fixed RPM value
- Snow-Plow Support
  - Input request commands deactivation of conflicting active safety features
  - Input request headlamps to full dim status



10 input/outputs configurable through GUI. Allows extensive customization of output activation criteria. Outputs are high side drive by default. Configurations can be read/write and stored for multiple vehicles. Various operating parameters available to read only. Downloadable software to configure the UVM from GM Upfitter.com

#### **UVM Application Examples:**

- Police upfits that require underhood electrical center momentary start up feature to control the HVAC climate system for K9 vehicles.
- Large Fleet customers that use telematic equipment (Geotab) to monitor mileage and idle CAN bus messages for vehicle maintenance/service schedules.







Module and user harness located right rear interior quarter panel.

#### STANDARD FLECTRICAL FEATURES

## SURVEILLANCE MODE - SEO 5J3

The Blazer EV Police and Special Service Package has a Body Control Module (BCM) calibration which disables all automatic exterior and interior lighting.

When activated, with the exterior lamp control in the auto position, the exterior and interior lighting will be disabled or dimmed to a minimum federally regulated level.

For detailed technical information on activation of this feature, refer to the vehicle technical guide under the Body Builder Manuals section on www.gmupfitter.com.

## RADIO MUTE FEATURE

A Radio Mute circuit (#10137) is provided to permit muting of the vehicle radio when an emergency vehicle radio is transmitting. It is the Gray/White blunt cut wire located between the front seats near the upfitter branch harness.

The following customer device electrical specifications must be met to avoid damage to the vehicle Exterior Lighting Module (ELM) input circuitry:

- No inductance allowed
- Maximum Load Capacitance: 600 nano-farads.
- Maximum Closed switch contact resistance: 20 ohms
- Minimum Open switch contact resistance: 100,000 ohms

# EXTERIOR LAMPS EMERGENCY FLASHING SYSTEM

Standard 6J7 provides headlamp high beam flashing and rear lamps flashing via the Exterior Lighting Module (ELM). The exterior lamps flashing is activated by customer switching of ground circuits in the upfitter harness located between the front seats (CONSOL) in the rear cargo area (CARGO).

Headlamp high beam flashing is activated via connection of upfitter circuit 8863 to ground via customer switching. The headlamps and high beam indicator will flash alternately at 3 flashes per second. Rear lamps flashing is chosen by the customer to flash either Red-White alternately (Brake lamps and Reverse Lamps, grounding upfitter circuit 8865) or Red-Red alternately (Left and Right Brake Lamps, grounding upfitter circuit 8864). The rear lamps flash rate is 3 per second. Depressing the Brake pedal will override the brake lamp flashing and placing the transmission in Reverse will override the reverse lamps flashing.

During daylight conditions, the Daytime Running Lamps (DRL) are automatically turned off whenever the Lamp Flashing System is activated. During night time conditions the low beam headlamps and tail lamps automatically turn on while the high beams flash. Turning on the high beam headlamps will override high beam flashing. If Option 9G8 is present the low beam head lamps and tail lamps must be manually activated. The Center Mounted Stop Lamp will operated only when the service brakes are applied.

#### NOTES:

- Wiring connection or splice changes are to be removed before the vehicle is returned to civilian use.
- For wiring diagram see Wiring Section

## PROTECTED IDLE

The Protected Idle Feature allows the vehicle to remain idling but will not allow the gear selector to be shifted from Park without a valid key fob.

#### **ACTIVATING PROTECTED IDLE**

#### Preconditions (All preconditions must be met.)

Vehicle is NOT in a low charge condition (Charge vehicle soon indicator is not on with yellow battery showing.)

Vehicle is in PROPULSION state

Vehicle is in Parked State

Vehicle speed is less than 4 kilometers per hour

Valid key fob is present.

#### Activation

Exit vehicle with key fob

#### Vehicle Feedback.

Upon activation of Protected Idle the Digital information Center (DIC) will display the following:

"Protected idle ON"

"Park in Open Area"

"Take Your Key"

"Protected idle on, take keys to secure vehicle"

If any of the above preconditions are not met while activating Protected Idle, DIC will display the message: "Protected Idle Unavailable"

#### **DEACTIVATING PROTECTED IDLE**

Valid key fob is present

Press and hold Cruise Cancel OR

Press brake pedal and shift out of Park **OR** 

Press the Ignition Switch with the Brake Pedal pressed.
DIC messages will turn off, indicating Protected Idle is no longer activated.

# CONDITIONS UNDER WHICH THE PROTECTED IDLE WILL TURN OFF AND VEHICLE WILL TRANSITION TO OFF POWER MODE

Brake pedal pressed without a valid key fob present **OR**Cruise Cancel Switch depressed without a valid key fob present **OR**Ignition Switch pressed without a valid key fob present **OR**With a valid key fob present, ignition switch is pressed and brake pedal is not pressed (the system treats this action as a customer request to turn OFF the vehicle.) **OR** 

Horn chirps occur. OR

Low power condition. Horn chirps occur.

# CONDITIONS UNDER WHICH THE PROTECTED IDLE WILL TURN OFF AND VEHICLE WILL TRANSISTION TO RUN POWER MODE.

If the Shift Lock mechanism is defeated and shifted Out of Park while the Protected Idle is active, the vehicle will transition to the RUN power mode and Protected Idle will be deactivated and Horn chirps occur. DIC messages will turn off indicating Protected Idle is inactive.

ALWAYS PROPERLY SUPERVISE A VEHICLE WHEN PEOPLE OR ANIMALS ARE INSIDE.





 ${\color{blue}\mathsf{OPTIONAL}}\ FRONT\ AND\ REAR\ WHELEN\ CORNER\ LIGHTING$  Shown with equipment from independent suppliers not covered by the GM New Vehicle Limited Warranty GM is not responsible for the safety or quality of independent supplier alterations.



T53 REAR LIFTGATE WARNING LIGHTS



REAR CARGO AREA (SHOWN WITH FALSE CARGO FLOOR) REMOVED.

Shown with equipment from independent suppliers not covered by the GM New Vehicle Limited Warranty GM is not responsible for the safety or quality of independent supplier alterations.

# 7X3 LED SPOTLAMP



15 cm High Intensity LED spotlamp mounted to left A pillar. The lamp is protected by a 15 amp fuse in the underhood Battery Disconnect Unit (BDU). See your dealer or www.gmupfitter.com for lamp replacement procedures

# 6C7

# **AUXILIARY DOME LAMP**





Auxiliary dome lamp is located on the headliner to the rear of the overhead console and is switched at the rear lamp base. Lamp is wired separately standard dome lamps with red and white LED bulbs.

# SDE TRAILER HITCH



Removable  $\overline{2''}$  (Class 2.) receiver. Requires (V92) trailering provisions and (VLG) trailer hitch closeout panel.



# **SWITCHES - REAR WINDOW** 6N5 **INOPERATIVE** 0

Calibration for rear windows to operate from drivers position only. Rear door window switches are inoperable. Rear door power regulators are operable only from driver position switches. Rear door window lockout switch remains illuminated in all positions when equipped with this feature



6E2

#### **FLEET KEY & REMOTE FOB**

**6E8** 

The Fleet Key allows the mechanical key to operate an entire fleet of vehicle locks and allows an unlimited number of remote keys to be paired for Keyless Open / Keyless Start and Protected Idle feature. Use of this on other fleet keyed-a-like vehicles will be limited to locking or unlocking the driver's door by pressing the exterior door handle button and starting the vehicle once inside. Note that a vehicle is only capable of recognizing the last 8 remote keys programmed for remote key buttons functions. Adding a 9th remote key will bump fob #1 button functionality until it is reprogrammed, Adding remote #1 back into the infotainment screen will bump fob #2 remote button functionality, etc. There are no limitations to the amount of fleet keys that will be recognized for Keyless Open/ Keyless Start of the vehicle. Purchasing extra KEY/FOBS and programming is a customer's responsibility. See your dealer for additional information regarding availability of more KEY/FOBS. Requires AMF. Includes Fleet Common Key AU7.

 $\mathsf{AMF}$ 

# PACKAGE OF FOUR UNPROGRAMMED KEYS/FOBS

AMF without 6E2 or 6E8 allows for up to 8 remote keys to be paired for remote lock/unlock and remote start. With 6E2 and/or 6E8 an unlimited number of remote keys can be paired.

Do not learn a remote key with a remote start button to a vehicle that does not have remote start.

#### PROGRAMMING PROCEDURE:

- 1. With one previously learned remote key in the vehicle, place the KEY/FOB to pair in the remote key pocket. Start vehicle and keep in PARK.
- 2. On the infotainment home screen, select Vehicle>Settings>Remote Lock, Unlock, Start>Remote Key Pairing.
- Follow on-screen instructions.



NOTE: If previously learned remote keys are not available, the programming of the new remote keys must be performed by a dealer using the Service Programming System (SPS). Key fob programming is not a warranty item and programming is conducted by the customer or at a dealer at customer expense.

9**G**8

#### **DRL & AHC DISABLED**

Daytime Running Lamps (DRL) and Automatic Headlamp Control (AHC) are deleted. Also disables automatic interior courtesy lighting. Main light sensor now works for day and night mode to allow dimming at anytime. See your dealer to restore the DRL and AHC to normal operation. With 9G8, the instrument cluster displays are dimmable only when the exterior lamp control is in the parking lamp or headlamp position.

#### UTQ THEFT DETERRENT DISABLE

Theft-deterrent system content is disabled. The alarm and horn become non-functional in an attempt of theft to the vehicle (recommended for vehicles utilizing 6E2 or 6E8 key codes).

Original Equipment Alterations: Limited warranty does not cover any damage or failure resulting from modification or alteration to the vehicle's original equipment as manufactured or assembled by General Motors. Examples of the types of alterations that would not be covered include: installation or use of any non-GM part, accessory, materials, or the cutting, welding or disconnecting of the vehicle's original equipment parts and components. Any upfit device1 connected to the open ended blunt cut circuits should be fuse protected per the "Wire Gage Table" on page 45

K219 - Lighting Control Module

DRZ - A10 - Inside Rearview Mirror

A11 - Radio

E7L - Rear License Plate Lamp -Left

E7R - Rear License Plate Lamp - Right

E73L - Rear Fascia Signal Lamp –Left A90 Logic

E73R - Rear Fascia Signal Lamp - Right A90 Logic

E6 - High Mount Stop Lamp

R44 - Radio AM Antenna Signal Filter Module - Center High Mounted Stop Lamp

#### **KEY FOR ACRONYMS AND TERMS**

CONSOL = SPACE BETWEEN FRONT SEATS

CARGO = CARGO AREA LEFT SIDE

IP RY CTR = IP RELAY CENTER ABOVE AND TO RIGHT OF BRAKE PEDAL

EBCM = ELECTRIC BRAKE CONTROL MODULE

PPM = 4000 PULSES PER MILE SPEED SIGNAL

ACCY = ACCESSORY

SURVEILLANCE = ALL AUTOMATIC LIGHTING DISABLED WHEN ACTIVATED

PARK ENABLE = PARK RELAY ACTIVATED

CHML = CENTER HIGH MOUNTED STOP LAMP; ON WHEN BRAKES APPLIED

BCM = BODY CONTROL MODULE

ELM = EXTERIOR LIGHT MODULE


WDO = WINDOW


SYNC = SYNCHRONIZED


GM Option Code	Wire Gage [mm^2]	Console Connector Terminal	Cargo Connector Terminal	Wire Color	Circuit Name /Circuit #
6J3	0.8	13533797 Terminal 2	13533797 Terminal 2	Brown	8855-Police Front Grille Light 1 Power
6J3	0.8	13533797 Terminal 3	13533797 x 1 Terminal 3	Brown/Blue	8856-Police Front Grille Light 2 Power
6J3	0.8	13533797 Terminal 4	13533797 x 1 Terminal 4	Black/Brown	8857-Police Front Grille Light Return
6J3	0.8	13533797 x 1 Terminal 5 13533797 x 1 Terminal 6	13533797 x 1 Terminal 5 13533797 x 1 Terminal 6	White Brown/Yellow	8858-Police Front Grille Light Synchronization 8859-Police Front Grille Light Steady Burn Activation
6J3	0.8	13533797 x 1 Terminal 7	13533797 x 1 Terminal 7	White/Black	8860-Police Front Grille Eight Steady Burn Activation
6J3	1.5	13533797 x 1 Terminal 7	13533797 x 1 Terminal 7	Green/White	8861-Police Front Grille Speaker +
6J3	1.5	13533797 x 1 Terminal 37	13533797 x 1 Terminal 37	Blue/White	8862-Police Front Grille Speaker -
6J7	0.35	13533797 x 1 Terminal 8	13533797 x 1 Terminal 8	Green	8863-Police High Beam Alternate Flash Enable.
5L0	0.35	13533797 x 1 Terminal 9	13533797 x 1 Terminal 9	Blue/Green	8864-Police Tail Lamp Red/Red Alternate Flash Enable.
5J9	0.35	13533797 x 1 Terminal 10	13533797 x 1 Terminal 10	Gray/Green	8865-Police Tail Lamp Red/White Alternate Flash Enable.
T53	0.8	X1 - 13533797 Terminal 11	X1 - 13533797 Terminal 11	White	8867-Police Liftgate Strobe Synch
T53	0.35	X1 - 13533797 Terminal 12	X1 - 13533797 Terminal 12	Violet/Yellow	8868-Police Liftgate Strobe Enable 1
T66 left front	0.75	None	X1 - 13544146 - Terminal 1	Violet	8870-Police Left Mirror Light Power
T66 left front	0.75	None	X1 - 13544146 - Terminal 2	Black/Violet	8871-Police Left Mirror Light Return
T66 left front	0.75	None	X1 - 13544146 - Terminal 3	White/Violet	8872-Police Left Mirror Light Synchronization
T66 left front	0.75	None	X1 - 13544146 - Terminal 4	Blue/Violet	8873-Police Left Mirror Light Steady Burn
T66 left front	0.75	None	X1 - 13544146 - Terminal 5	Yellow/Violet	8874-Police Left Mirror Light Flash Enable
T66 left rear	0.75	None	X1 - 13544146 - Terminal 6	Green	8875-Police Left Rear Window Light Power
T66 left rear	0.75	None	X1 - 13544146 - Terminal 7	Black/Green	8876-Police Left Rear Window Light Return
T66 left rear	0.75	None	X1 - 13544146 - Terminal 8	White/Green	8877-Police Left Rear Window Light Synchronization
T66 left rear	0.75 0.75	None None	X1 - 13544146 - Terminal 9 X1 - 13544146 - Terminal 10	Blue/Green Yellow/Green	8878-Police Right Rear Window Light Steady Burn 8879-Police Right Rear Window Light Flash Enable
T66 right front	0.75	None	X1 - 13544146 - Terminal 10 X1 - 13544146 - Terminal 11	Gray	8880-Police Right Mirror Light Power
T66 right front	0.75	None	X1 - 13544146 - Terminal 12	Black/Gray	8881-Police Right Mirror Light Return
T66 right front	0.75	None	X1 - 13544146 - Terminal 13	White/Gray	8882-Police Right Mirror Light Synchronization
T66 right front	0.75	None	X1 - 13544146 - Terminal 14	Blue/Gray	8883-Police Right Mirror Light Steady Burn
T66 right front	0.75	None	X1 - 13544146 - Terminal 15	Yellow/Gray	8884-Police Right Mirror Light Flash Enable
T66 right rear	0.75	None	X1 - 13544146 - Terminal 16	Brown	8885-Police Right Rear Window Light Power
T66 right rear	0.75	None	X1 - 13544146 - Terminal 17	Black/Brown	8886-Police Right Rear Window Light Return
T66 right rear	0.75	None	X1 - 13544146 - Terminal 18	White/Brown	8887-Police Right Rear Window Light Synchronization
T66 right rear	0.75	None	X1 - 13544146 - Terminal 19	Blue/Brown	8888-Police Right Rear Window Light Steady Burn
T66 right rear	0.75	None	X1 - 13544146 - Terminal 20	Yellow/Brown	8889-Police Right Rear Window Light Flash Enable
UT7 / 6J1	5	13533168 x1 for pwr and grd term 2	NA	Black	7150-Ground (71) Police
6J1 , Police Provisions ( Rear)	5	13533168		RD/GN	742-Primary Fused Battery Positive Voltage (7)
6J8/9/G/E	1	None	X1 - 13533797 Terminal 29	Blue	8890-Police Front Corner Light Power
6J8/9/G/E	1	None	X1 - 13533797 Terminal 31	Blue/White	8891-Police Corner Stobe Synchronization
6J8/9/G/E	1	None	X1 - 13533797 Terminal 38	Green	8892-Police Rear Corner Light Power
6J8/9/G/E	1	None	X1 - 13533797 Terminal 34	Violet	8893-Police Front Corner Stobe Power
6J8/9/G/E	1	None	X1 - 13533797 Terminal 30	BN/WH	8915
6J8/9/G/E WX7	0.5	None	X1 - 13533797 Terminal 35 NA	Yellow	8894-Police Rear Corner Strobe Power 201
		NA		See K2 Tahoe wire colors	
WX7	0.5	NA	NA	See K2 Tahoe wire colors	118
WX7	0.5	NA	NA	See K2 Tahoe	200
				wire colors	
WX7	0.5	NA	NA	See K2 Tahoe	117
WX7	0.5	NA	NA	wire colors See K2 Tahoe	199
				wire colors	
WX7	0.5	NA	NA	See K2 Tahoe	116
WX7	0.5	NA	NA	wire colors See K2 Tahoe	46
WX7	0.5	NA	NA	wire colors See K2 Tahoe	115
*****				wire colors	
T53	0.8	NA	NA	Violet	8866-Police Liftgate Strobe Power
T53	0.8	NA	NA	Black	7650-Ground (76) Police
T53	0.35	NA	NA	Violet/Green	8869-Police Liftgate Strobe Rear On OFF
7X3	0.75			RD/GN	10240-Secondary Fused Battery Positive Voltage (102) Police
7X3	0.75			Black	7750-Ground (77) Police
7X3	0.75			RD/GY	10340-Secondary Fused Battery
7∨7	0.75			Black	Positive Voltage (103) Police 7850-Ground (78) Police
7X3 6C7 Aux.	0.75			D/BU	10140-Secondary Fused Battery
dome lamp	0.73			D/ BU	Positive Voltage (101) Police
				Disale	<u> </u>
	0.75			Black	/55()-(iround (/5) Police
6C7 Aux. dome lamp	0.75			Black	7550-Ground (75) Police

GM Option Code	Wire Gage [mm^2]	Console Connector Terminal	Cargo Connector Terminal	Wire Color	Circuit Name /Circuit #
Police	0.5	X1 - 13533797 Terminal 28	Na	Blue/Yellow	8895-Police Relay 1 Control
Provisions, console are	a				
Police	1	X1 13533797 Terminal 32	NA	RD/GN	8911-Police Select Supply Voltage 1
Provisions, console are	a				
Police	0.5	X1 - 13533797 Terminal 29	NA	Green/Yellow	8896-Police Relay 2 Control
Provisions, console are	a				
Police	1	13533797 Terminal 33	NA	RD/GY	8912-Police Select Supply Voltage 2
Provisions, console are	a				
Police	10	NA	13533168 x1 for pwr and grd	RD/VT	842-Primary Fused Battery Positive Voltage (8)
Provisions, console area					
6J1, Police Provisions,	10	NA	13533168 x1 for pwr and grd	Black	7350-Ground (73) Police
console area					
6J1, Police Provisions,	0.5	X1 - 13533797 Terminal 13	X1 - 13533797 Terminal 13		Circuit 817
console area					
6J1, Police Provisions,	0.5	X1 - 13533797 Terminal 14	X1 - 13533797 Terminal 14		Circuit 2801
console area					
6J1, Police Provisions,	0.5	X1 - 13533797 Terminal 15	X1 - 13533797 Terminal 15		4939-Run/Crank Ignition 1 Voltage (49)
console area					
6J1, Police Provisions,	0.35	X1 - 13533797 Terminal 16	X1 - 13533797 Terminal 16		Circuit 8917
console area					
6J1, Police Provisions,	0.35	X1 - 13533797 Terminal 18	X1 - 13533797 Terminal 18		Circuit 6821
console area					
6J1, Police Provisions,	0.5	X1 - 13533797 Terminal 19	X1 - 13533797 Terminal 19		Circuit 820
console area					
6J1, Police Provisions,	0.5	X1 - 13533797 Terminal 20	X1 - 13533797 Terminal 20		Circuit 5813
console area					
6J1, Police Provisions	0.5	NA	X1 - 13533797 Terminal 21	Gray/Yellow	8897-Police Relay 3 Contro
(Rear)					
8907-Police Select Fus	se 2.5	NA	X1 13533797 Terminal 1	RD/WH	8913- Select fuse supply voltage
Supply Voltage 3					
8898 6J1 , Police	0.5	NA	X1 - 13533797 Terminal 32,	Violet/Yellow	8898-Police Relay 4 Control
Provisions ( Rear)					
8914-Police Select	2.5	NA	X1 13533797 Terminal 17	RD/YE	8914- Select fuse supply voltage
Fuse Supply Voltage 4					
Steering	0.35	X1 - 13533797 Terminal 22	X1 - 13533797 Terminal 22	BN/GY	8021-Police Microphone Enable
wheel switches					
Steering	0.35	X1 - 13533797 Terminal 23	X1 - 13533797 Terminal 23	Grey/Violet	8022-Police Roof Lamp Control
wheel switches					
Radio mic.	0.5	X1 - 13533797 Terminal 24	X1 - 13533797 Terminal 24	Black	7450-Ground (74) Police
Radio mic.	0.5	X1 - 13533797 Terminal 25	X1 - 13533797 Terminal 25	Blue/White	8899-Police Microphone Data
Radio mic.	0.5	X1 - 13533797 Terminal 26	X1 - 13533797 Terminal 26	Blue/Violet	8900-Police Microphone Input
Dimmer function	0.8	X1 - 13533797 Terminal 27	X1 - 13533797 Terminal 27	YE	Circuit 6817
for Instrument Panel					

# XP2 UPFITTER WIRING HARNESS

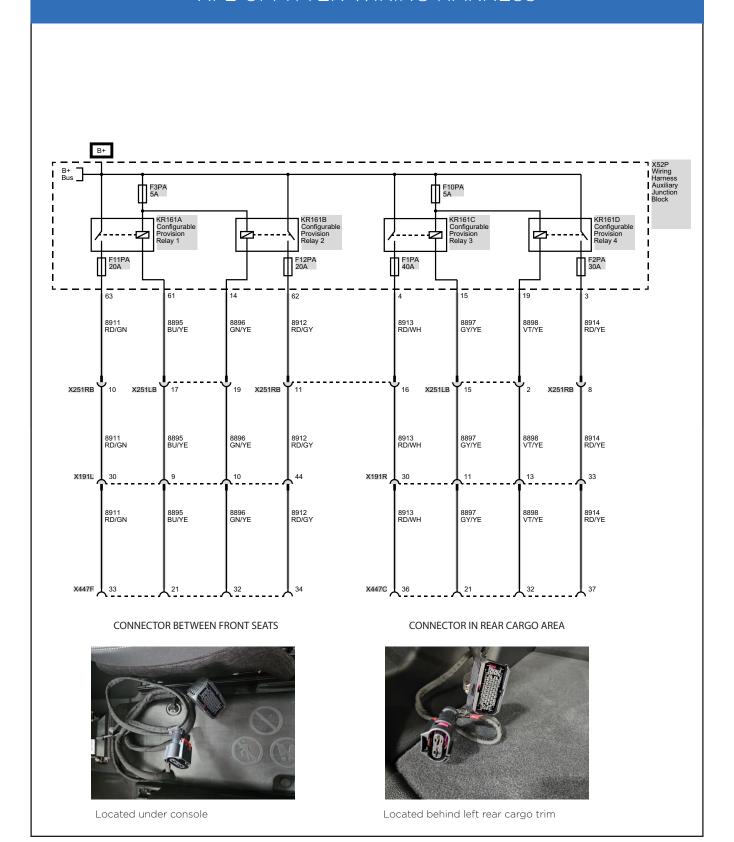


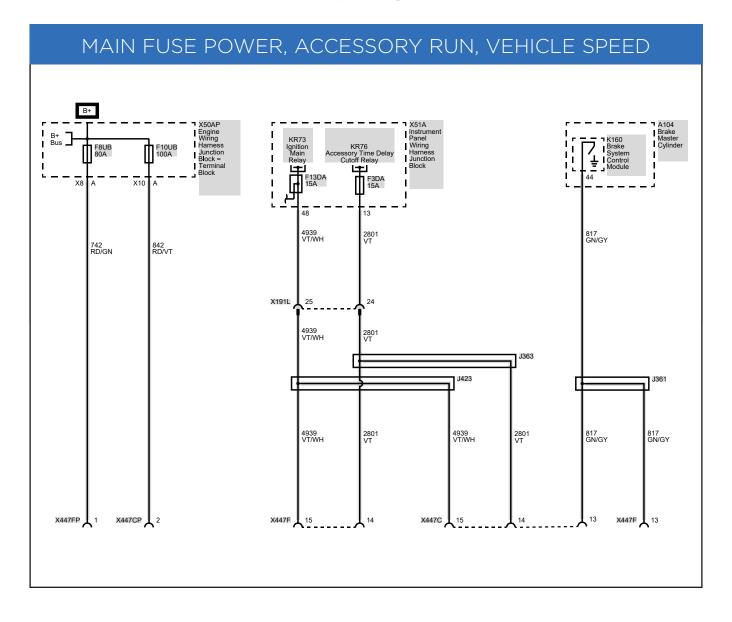

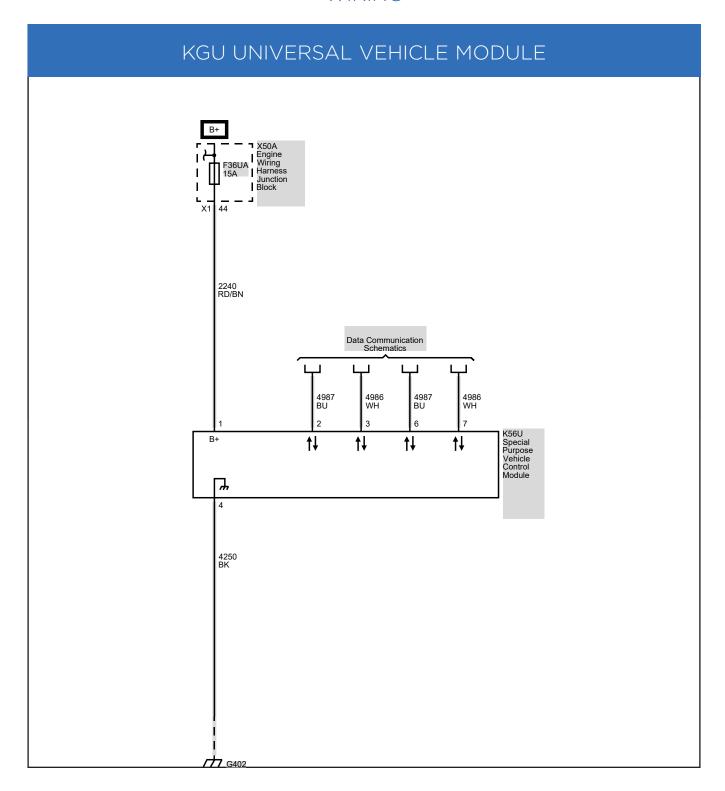



For instructional videos refer to https://www.gmupfitter.com/instructional-videos/


# REPURPOSED STEERING WHEEL SWITCHES

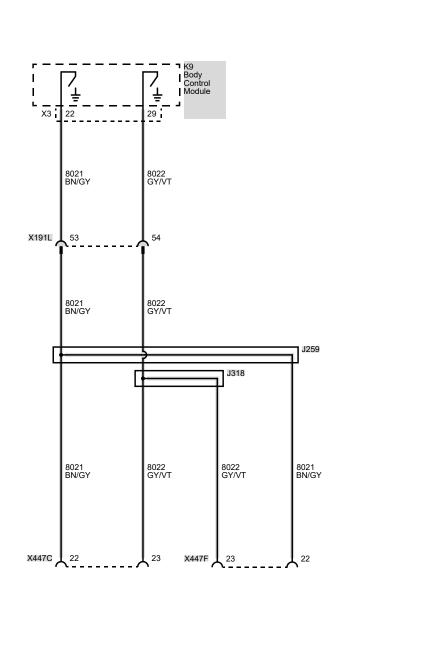



# **BCM SIGNAL PROVISIONS** F81UA 10A YE/BK WH/VT BK YE/BK BU/BN YE/BK BU/BN WH/VT BK WH/VT YE

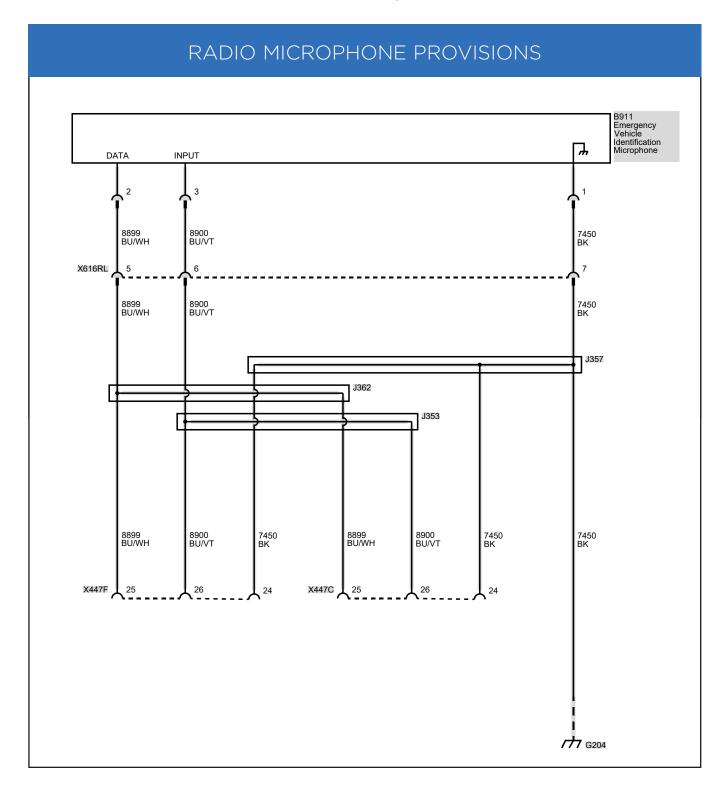


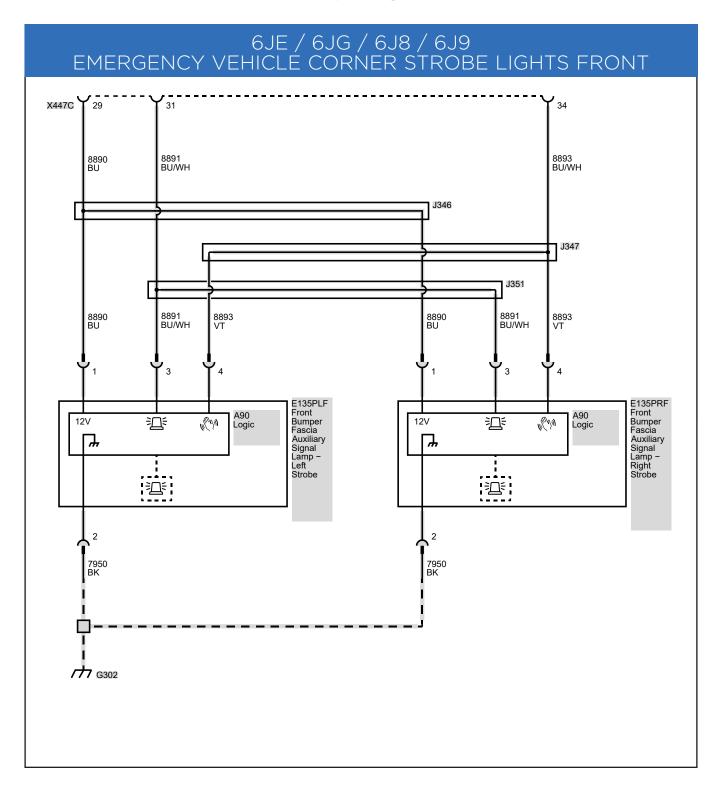

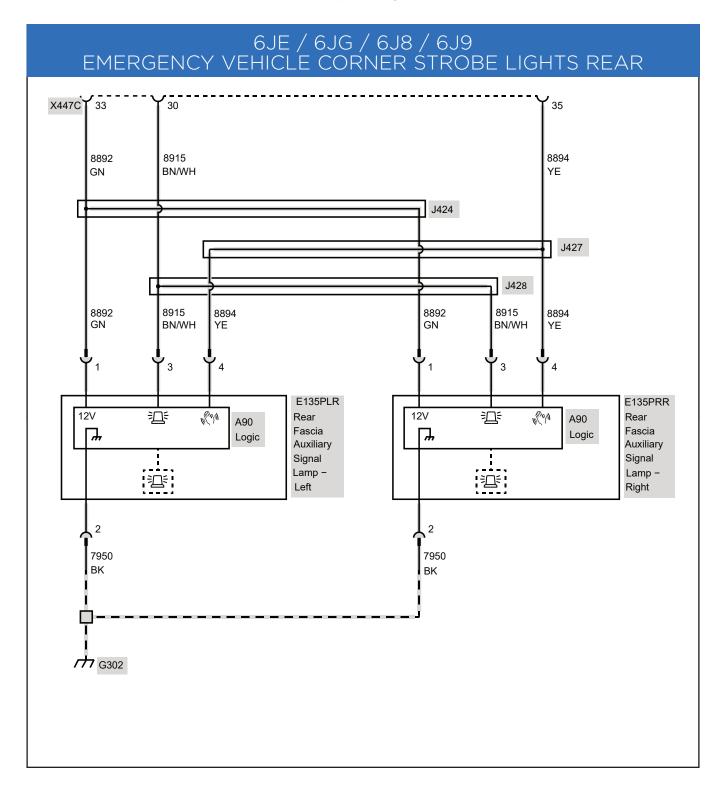

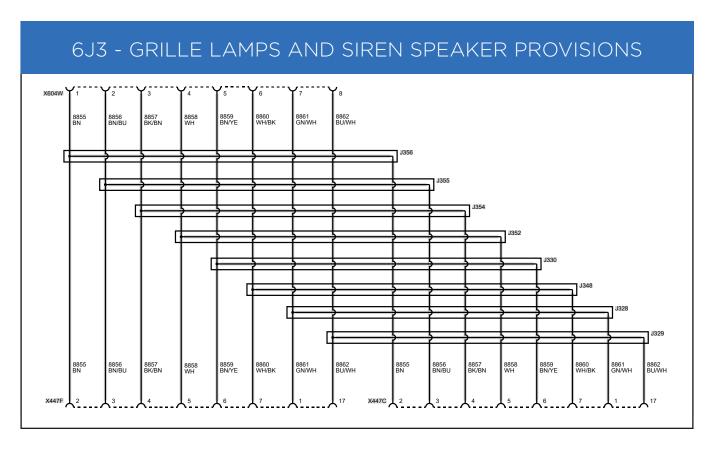

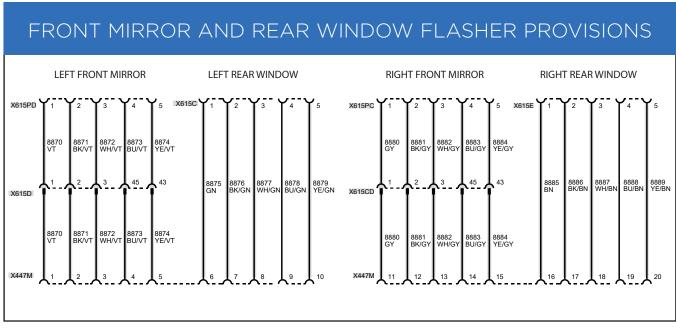

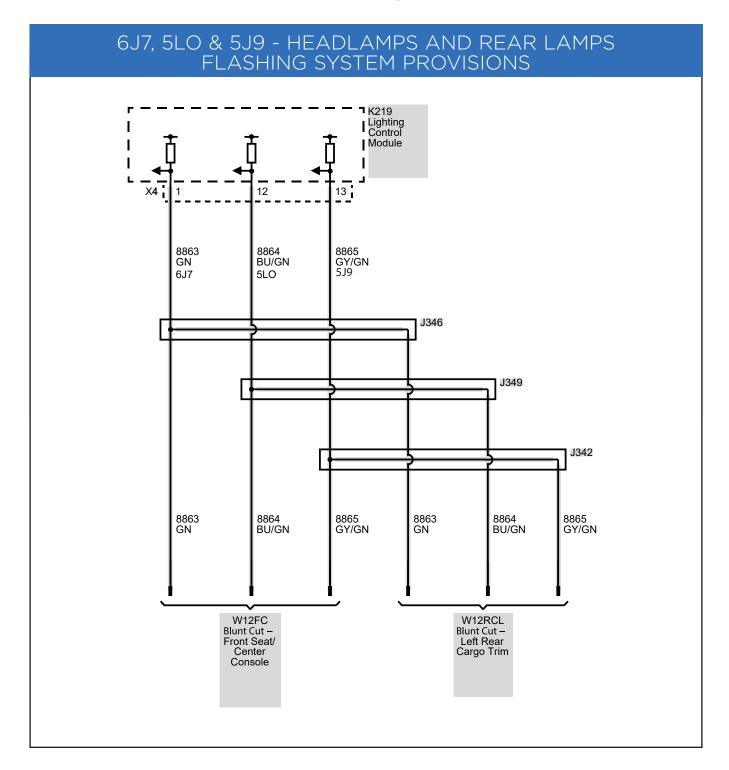


## WX7 FRONT DOOR SPEAKERS PROVISIONS 118 BN/BU X3 8 GN GN/BK BU/BK YE/BK YE J213 J214 BN/BU BU BN/BU YE/BK YE YE/BK X215D WH BN/BU GN/BK BU/BK YE/BK X215C X215C BN/BU YE/BK BU BN/BU YE/BK X615D X615CD BN/BU YE/BK YE P19AH Radio Front Side Door Speaker – Right P19W Radio Front Speaker – Instrument Panel Right Radio Front Side Door Speaker – Left


# 6J4 - HORN AND SIREN CONTROL PROVISION X50A Engine Wiring Harness Junction Block KR3 Horn Relay TP28 ı F60UA 20A I X2 10 28 BN/WH 6J4 -6J4 J425 28 BN/WH 28 BN/WH 29 BN/GY X604X 👗 1 K9 Body Control Module 28 BN/WH 3287 GN/WH X1 2 X85 Steering Wheel Airbag Coil P13 Horn W39 Blunt Cut – Configurable/ Accessory Switch Provision 3287 GN/WH 1150 BK 2 S33 Steering Wheel Horn Contact 2150 BK G101 🖒 // G201

## T53 - LIFTGATE WARNING LAMPS & 6C7 AUXILIARY DOME LAMP X4 8 8866 VT 8868 VT/YE 8869 VT/GN X201A X201B 8867 WH 8869 VT/GN X201A 20 S194 Emergency Vehicle Warning Rear Lamp Switch E9LGL Emergency Vehicle Warning Rear Lamp – Liftgate Left E9LGR Emergency Vehicle Warning Rear Lamp – Liftgate Right J374 12V A90 Logic A90 Logic 교 8868 VT/YE 8868 VT/YE 8867 WH 8867 WH 些 些 2 7650 BK 7650 BK 12 X447C 12 4450 BK / G405 **G**401

# 7X3 LED SPOT LAMPS & 6C7 AUXILIARY DOME LAMP

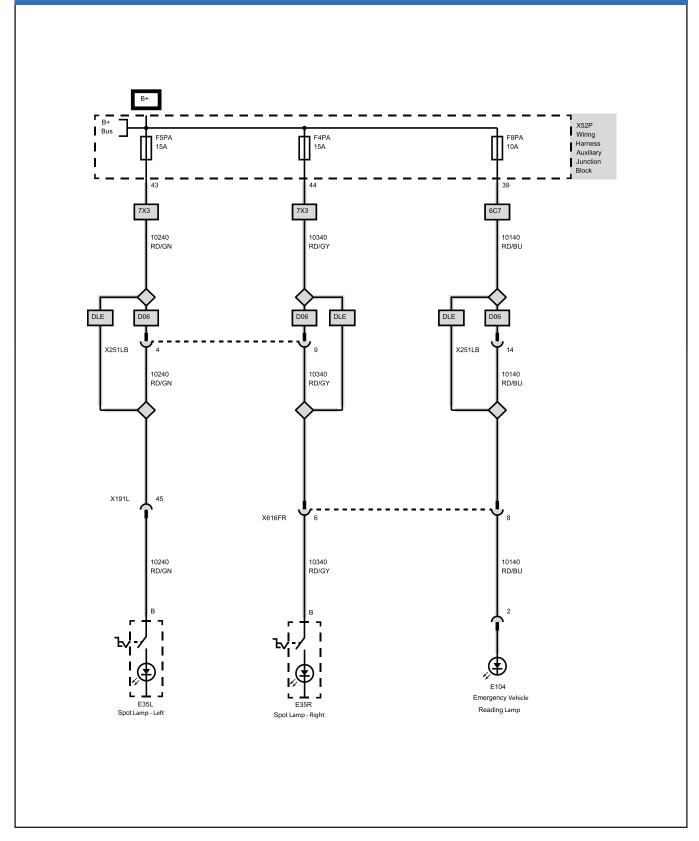

# NO DRILL / NO CUT ZONES

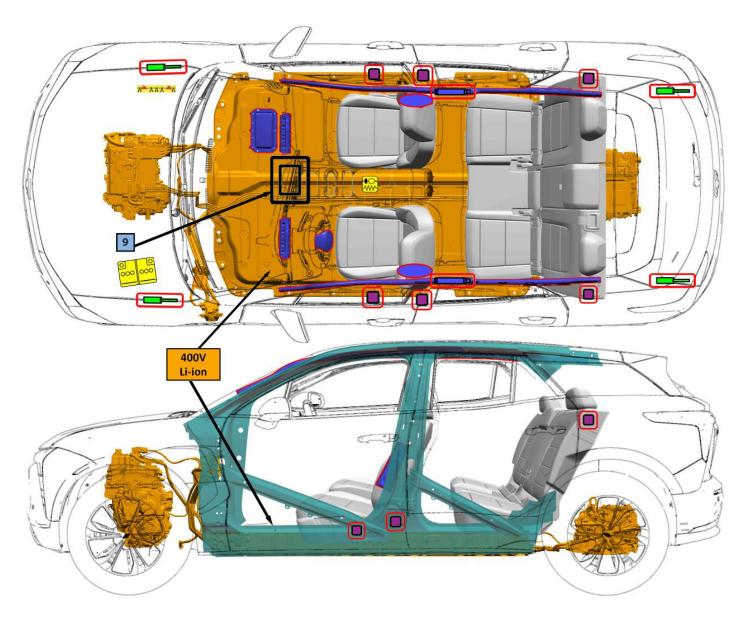


## **WARNING - DO NOT CUT ANY ORANGE COLORED HIGH VOLTAGE CABLES**

LEDGEND									
	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Gas strut/ Preloaded spring
	High strength zone		Zone requiring special attention	000 000	Battery low voltage	0 0	High voltage battery pack	7	High voltage power cable component
<del>** * * * *</del>	Cable Cut Location								


## **AIRBAGS**

## FRONTAL AIRBAGS

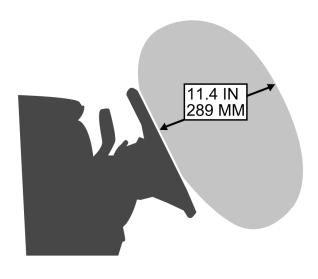


#### STEERING DRIVER AIRBAG

VIEW FROM DRIVER SIDE

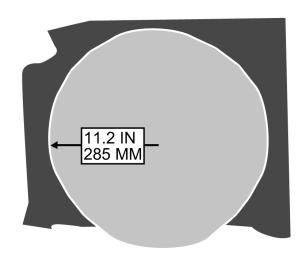


#### STEERING WHEEL DRIVER AIRBAG

VIEW FROM DRIVER SIDE

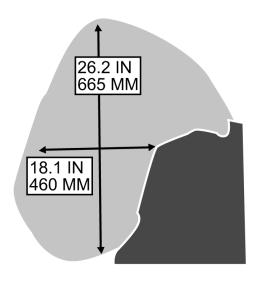

#### STEERING WHEEL DRIVER AIRBAG

VIEW FROM PASSENGER SIDE

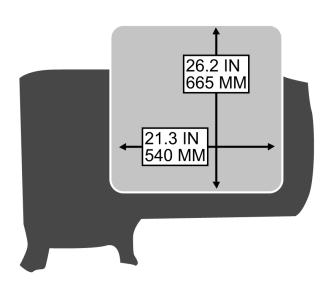


#### FRONT OUTBOARD PASSENGER AIRBAG

VIEW FROM PASSENGER SIDE

Sitting too close to an airbag when it deploys can increase the risk of serious injury or death. Always properly wear your seat belt. See Owner's Manual for more information.


## **AIRBAGS**

## HEAD-CURTAIN AND FRONT SIDE IMPACT AIRBAGS

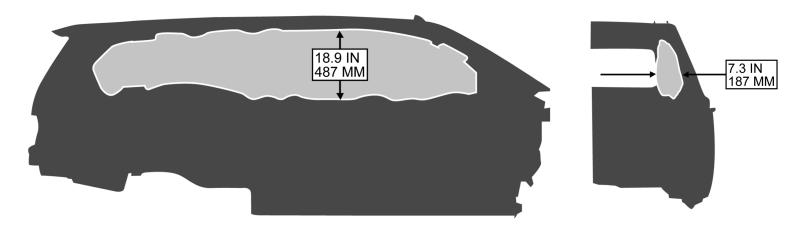

#### **HEAD CURTAIN AIRBAG**

DRIVER SIDE SHOWN - PASSENGER SIDE SIMILAR

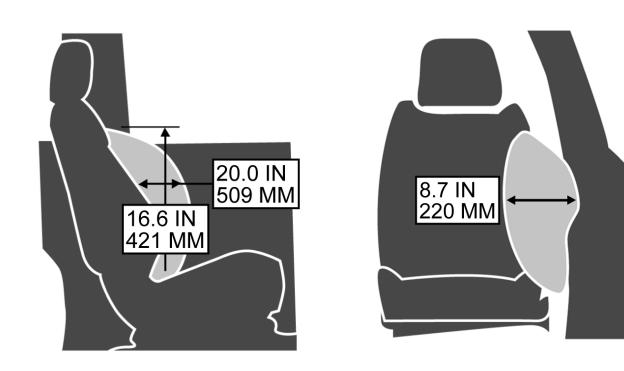


#### FRONT SEAT SIDE IMPACT AIRBAG

DRIVER SEAT SHOWN - FRONT OUTBOARD PASSENGER SIMILAR

Sitting too close to an airbag when it deploys can increase the risk of serious injury or death. Always properly wear your seat belt. See Owner's Manual for more information.


## **AIRBAGS**

## HEAD-CURTAIN AND FRONT SIDE IMPACT AIRBAGS

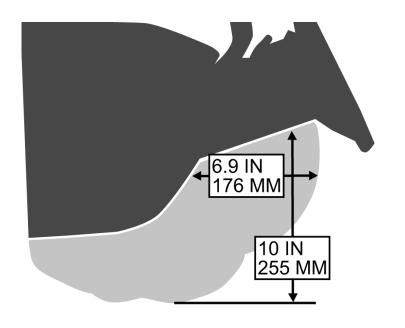


**KNEE AIRBAG** 

SIDE VIEW FROM DRIVER SIDE

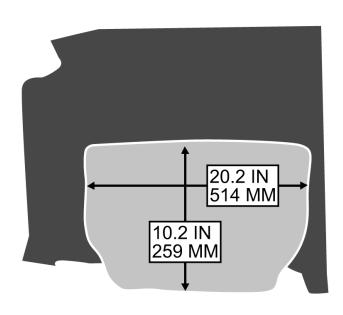


#### **KNEE AIRBAG**

FRONT VIEW FROM DRIVER SIDE

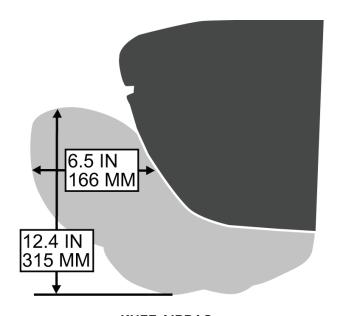

KNEE AIRBAG

SIDE VIEW FROM PASSENGER SIDE

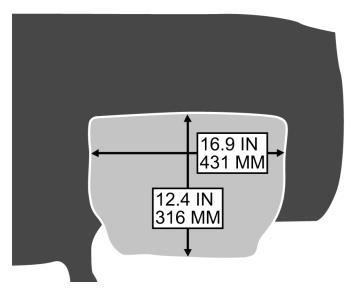

KNEE AIRBAG

FRONT VIEW FROM PASSENGER SIDE

Sitting too close to an airbag when it deploys can increase the risk of serious injury or death. Always properly wear your seat belt. See Owner's Manual for more information.

#### AIRBAGS FAQ

# Q: Can equipment such as radar devices, video cameras, and radio trees be mounted in a specialty vehicle equipped with a right front passenger frontal airbag?

A: Yes, but care must be taken to properly mount the equipment outside of the airbag "deployment zone."

#### Q: What is the airbag "deployment zone"?

A: The term "deployment zone" describes the space an airbag takes up when fully inflated. Airbags need room to work properly, and anything in the "deployment zone" - such as improperly mounted equipment - can greatly affect the performance of the airbag.

#### Q: How can I identify the airbag "deployment zone" in my vehicle?

A: See Airbag Deployment Diagrams for more information. The diagrams provide the approximate dimensions of the "deployment zones" for your specialty vehicle. Before doing any service work, including the installation of any equipment, consult the appropriate service manual.

#### Q: Is it possible to shield equipment so it does not interfere with airbag deployment?

A: While shielding may protect certain equipment from being damaged or dislodged, it may also negatively affect how an airbag inflates. Therefore, we do not recommend the placement of any equipment in the deployment zone, even if shielded.

#### Q: Can the installation of push bumpers on the front end of the vehicle affect the deployment of the airbag?

A: It is not likely that installing push bumpers will affect deployment for the airbag as long as the vehicle structure itself is not modified. GM is not aware of any adverse defects effect on the deployment of the front airbags due to use of many aftermarket push bumpers installed on current GM police vehicles

See "Adding Equipment to the Airbag-Equipped Vehicle" in the owner manual for more information.

#### **Customer-Installed Equipment**

Before installing equipment, read the following.

Airbags inflate with great force, faster than the blink of an eye. No objects, such as shotguns, should be placed over or near the airbag covers. Equipment mounted too close to an inflating airbag could prevent the airbag from operating properly to protect the occupants or could be forced into an occupant or break and become a dangerous projectile, causing severe injury or even death. To help prevent injury and to allow the airbag to perform as it was designed, do not mount equipment inside the airbag deployment zones.

Do not attach anything to the steering wheel hub or mount any equipment within the deployment zone for the driver airbag.

Do not mount equipment on the passenger side of the instrument panel top pad deployment zone. Equipment should not be mounted on or around the passenger airbag opening because of a deploying airbag. To allow the airbag to perform as it was designed, do not mount equipment inside the airbag deployment zone.

Do not mount a security barrier such that the ends of the barrier or brackets are within the roof-rail airbag deployment zones.

Avoid installing wiring for roof-rail emergency lighting or radio antennas that may restrict the proper deployment of the roof-rail airbags.

GM approved service procedures must be followed to remove and reinstall the instrument panel to the pad to ensure proper airbag deployment.

The police vehicle has a rollover sensor mounted on the centerline of the vehicle between the driver and front outboard passenger positions. If the vehicle has individual front seats, the rollover sensor will be exposed. Do not mount equipment within 25 mm (1 in) of the rollover sensor. This may affect the performance of multiple restraint systems.

#### **ONSTAR**

**POU<sup>1</sup> ONSTAR SECURITY -** 12 Months of Service OnStar Security service is included in the price of the vehicle. Total service duration is 12 months. Non-Transferrable. Non-Refundable.

**POJ¹ ONSTAR SECURITY -** 24 Months of Service OnStar Security service is included in the price of the vehicle. Total service duration is 24 months. Non-Transferrable. Non-Refundable.

POK¹ ONSTAR SECURITY - 36 Months of Service OnStar Security service is included in the price of the vehicle. Total service duration is 36 months. Non-Transferrable. Non-Refundable.

**POL¹ ONSTAR SECURITY -** 48 Months of Service OnStar Security service is included in the price of the vehicle. Total service duration is 48 months. Non-Transferrable. Non-Refundable.

**POQ1 ONSTAR SECURITY -** 60 Months of Service OnStar Security service is included in the price of the vehicle. Total service duration is 48 months. Non-Transferrable. Non-Refundable.

**POV2 ONSTAR INSIGHTS -** 12 Months of Service OnStar Insights service is included in the price of the vehicle. Total service duration is 12 months. Non-Transferrable. Non-Refundable.

**POW2** ONSTAR INSIGHTS - 24 Months of Service OnStar Insights service is included in the price of the vehicle. Total service duration is 24 months. Non-Transferrable. Non-Refundable.

**POX2 ONSTAR INSIGHTS -** 36 Months of Service OnStar Insights service is included in the price of the vehicle. Total service duration is 36 months. Non-Transferrable. Non-Refundable.

**POY2 ONSTAR INSIGHTS -** 48 Months of Service OnStar Insights service is included in the price of the vehicle. Total service duration is 12 months. Non-Transferrable Non-Refundable

**POZ<sup>2</sup> ONSTAR INSIGHTS -** 60 Months of Service OnStar Insights service is included in the price of the vehicle. Total service duration is 60 months. Non-Transferrable. Non-Refundable.

**R8G<sup>3</sup> ONSTAR ONE BUSINESS PLUS -** 12 Months of Service OnStar One Business Plus (bundle and save) includes up to 12 months of OnStar Security and OnStar Insights services. OnStar One Business Plus service is included in the price of the vehicle. Total service duration is 12 months. Non-Transferrable. Non-Refundable.

**RFH<sup>3</sup> ONSTAR ONE BUSINESS PLUS -** 24 Months of Service OnStar One Business Plus (bundle and save) includes up to 24 months of OnStar Security and OnStar Insights services. OnStar One Business Plus service is included in the price of the vehicle. Total service duration is 24 months. Non-Transferrable. Non-Refundable.

**R8P<sup>3</sup> ONSTAR ONE BUSINESS PLUS -** 36 Months of Service OnStar One Business Plus (bundle and save) includes up to 36 months of OnStar Security and OnStar Insights services. OnStar One Business Plus service is included in the price of the vehicle. Total service duration is 36 months. Non-Transferrable. Non-Refundable.

**R8Z³** ONSTAR ONE BUSINESS PLUS - 48 Months of Service OnStar One Business Plus (bundle and save) includes up to 48 months of OnStar Security and OnStar Insights services. OnStar One Business Plus service is included in the price of the vehicle. Total service duration is 48 months. Non-Transferrable. Non-Refundable.

**R8W<sup>3</sup> ONSTAR ONE BUSINESS PLUS -** 60 Months of Service OnStar One Business Plus (bundle and save) includes up to 60 months of OnStar Security and OnStar Insights services. OnStar One Business Plus service is included in the price of the vehicle. Total service duration is 60 months. Non-Transferrable. Non-Refundable.

#### PR64 SIRIUSXM, ADDITIONAL 9 MONTHS OF THE SXM PLATINUM PLAN. Listen inside and

outside the car on the app in addition to the trial period included with the vehicle.

PR7<sup>4</sup> SIRIUSXM, ADDITIONAL 21 MONTHS OF THE SXM PLATINUM PLAN. Listen inside and outside the car on the app in addition to the trial period included with the vehicle

PR8<sup>4</sup> SIRIUSXM, ADDITIONAL 33 MONTHS OF THE SXM PLATINUM PLAN. Listen inside and outside the car on the app in addition to the trial period included with the vehicle.

1. OnStar plan, working electrical system, cell reception and GPS signal required. OnStar links to emergency services. See onstar.com for details and limitations. Roadside services provided by Allstate Roadside Service for vehicles only. Limitations and restrictions apply. Stolen Vehicle Assistance requires armed GM factory- installed theft-deterrent system, contact method on file and enrollment to receive alerts. Additional messaging and data rates may apply. Services are intended to assist with vehicle recovery and do not prevent theft or protect against damage or loss. Requires (UEI) OnStar. Requires one of the following US Fleet or Government order types: FLS, FNR, FRC, FBC, FGO or FEF. Not available with POJ, POK, POJ, POV, POW, POX, POY, POZ, R8G, R8P, R8W, R8Z, or RFH. Not available with a ship-to of Guam, Puerto Rico or the Virgin Islands. 2. OnStar Insights provides fleet managers and drivers the tools and data they need to help maximize fleet productivity and help maximize fleet's operational efficiencies. OnStar Insights relays real-time vehicle data like vehicle location, driver performance information and more. Eligible customers must sign up for an account at www.onstarvehicleinsights.com in order to take advantage of this offer. Requires an active connected vehicle services plan. Requires (UEI) OnStar. Requires one of the following US Fleet or Government order types: FLS, FNR, FRC, FBC, FGO or FEF. Not available with POU, POJ, POK, POL, POQ, POV, POY, POZ, R8G, R8P, R8W, R8Z, or RFH. Not available with a ship-to of Guam, Puerto Rico or the Virgin Islands. 3. OnStar One Business Plus (bundle and save) includes OnStar Security and OnStar Insights services. OnStar plan, working electrical system, cell reception and GPS signal required. OnStar links to emergency services. Service coverage varies with conditions and location. Service availability, features and functionality vary by device and software version. See onstar.com for details and limitations. Requires (UEI) OnStar. Requires one of the follo

# MAINTENANCE / LIMITED WARRANTY

SCHEDULED MAINTENANCE	One visit within first year of vehicle delivery <sup>1</sup>
BUMPER-TO- BUMPER LIMITED WARRANTY	3 years/36,000 miles <sup>2</sup> . Bumper-to-Bumper Limited Warranty with no deductible
ELECTRIC VEHICLE PROPULSION LIMITED WARRANTY	8 Years / 100,000 Miles <sup>2</sup>
TIRES <sup>4</sup>	3 years/36,000 miles <sup>2</sup> ; coverage prorated after first 12,000 miles
ROADSIDE ASSISTANCE AND COURTESY TRANSPORTATION	Qualified Fleet Customers: 5 years/100,000 miles <sup>3</sup>
RUST-THROUGH	6 years/100,000 miles <sup>2</sup>
CORROSION	3 years/36,000 miles <sup>2</sup>
WHEEL ALIGNMENT AND BALANCE	Up to 7,500 miles <sup>5</sup>

<sup>1.</sup> Includes first required maintenance visit as stated in vehicle maintenance schedule. Maintenance visit consists of oil change, tire rotation and Multi-Point Vehicle Inspection. Does not include air filters. See participating dealer for other restrictions and complete details. Excludes vehicles ordered with fleet delete option RY9. 2. Whichever comes first. See dealer for limited warranty details. 3. Tires also covered under the Bumper-to-Bumper Warranty but are prorated based upon mileage. See dealer for warranty details. 4. If the vehicle has a warrantable failure, see your Owner's Manual for full details on the Courtesy Transportation program. 5. Customer maintenance item after 7,500 miles.



GM reserves the right to make changes at any time, without notice, in prices, colors, materials, equipment, specifications, models, and availability. Specifications, dimensions, measurements, ratings, and other numbers in this catalog and other printed materials provided at the dealership or affixed to vehicles are approximates based upon design and engineering drawings and prototypes and laboratory tests. Your vehicle may differ due to variations in manufacture and equipment. Since some information may have been updated since the time of printing, please check with your GM dealer for complete details. Some of the equipment shown or described throughout this publication may be available at extra cost, and/or is supplied by an independent supplier.

Copyright 2024 General Motors. All rights reserved. All text, mages, graphics, and other materials in this publication are subject to the copyright and other intellectual property rights of General Motors. These materials may not be reproduced, distributed, or modified without the express written permission of General Motors. The marks appearing in this publication including, but not limited to: GM and the GM logo; Chevrolet and their respective logos, emblems, slogans, and vehicle model names and body designs; and other marks such as GM ENVOLVE and Commercial are trademarks and/or service marks of General Motors, its subsidiaries, affiliates, or licensors.

For more detailed information, contact your District Sales Manager or see the online order guide at gmevolve.com/police.

